

bar-miniswitch®

With patented self-setting

Installation and Operation Manual



Inhalt

Instructions in Safety and Warnings	3
- Scope of Validity	3
- Copyright	3
- Exemption from Liability	3
- Intended Use	4
- Guarantee	4
- Obligations of the Customer	4
- Authorised Personnel	5
Technical Data	6
Dimensioned Drawing	7
Delivery and Unpacking	8
- Controlling the delivery	8
- Scope of delivery	8
- Versions and certificates	9
Mounting and Commissioning	9
- Mounting	9
- Connecting	10
- Commissioning	10
- Cleaning	10
- Maintenance	10
Declaration of Conformity	11

Instructions in Safety and Warnings

Before commissioning, read these instructions through carefully and follow all advice. In this documentation we use different types of instructions for safety and warning signs:

DANGER

... indicates a real and near danger. To ignore this sign means possible death or serious injury as consequence.

WARNING

... indicates a threat of danger. To ignore this sign means possible serious injury or material damage as consequence.

ATTENTION

... indicates a possible danger. To ignore this sign means possible material damage as consequence.

NOTE

... stands for advice and tips for a better understanding of instructions or a better handling of the unit.

Scope of Validity

The afore-mentioned operating instructions are valid for opto-electrical position indicators, here defined to be the „bar-miniswitch®“. They react according to the operator of the unit, that means the person, that works with the unit. This is not a technical handbook. For questions, arising from the contents of this documentation, please contact our customer service department.

Copyright

The unit and this documentation are protected by copyright. Their reproduction without written permission will be contested in court. We reserve all rights to this documentation and its contents thereof, also for their reproduction and/or duplication in whatever imaginable form, e.g. through photocopies, print, on whatever data carriers or in whatever translated form. The reprinting of this documentation is only possible via the express written permission of bar GmbH.

The technical state at the time of delivery of the unit and instructions is a deciding factor, in case no other information is provided. We reserve the right to technical changes without special notice in advance. Earlier instructions lose their validity. The General Terms and Conditions for Sales and Delivery as prescribed by bar GmbH are to be adhered to.

Exemption from Liability

We guarantee the fault-free function of our product according to our advertising, the product information and this documentation issued by us. Further product features are not promised. We undertake no liability for economy and fault-free function, when the product is used for other purposes, as described in the section „Intended Use“.

Damages are generally excluded, except in the case of criminal intent or gross negligence committed by bar is proved, or in the case of promised product features being absent.

If this product is exposed to non-prescribed environments, for which it is not suitable or does not correspond to the

Technical Standard as stipulated therein, then we cannot and will not be held responsible for the consequences.

We accept no liability for damages to systems and equipment in whatever form in the surrounding environment around the product, which result from a fault of the product or in this documentation. We are not responsible for injuries to patents and/or other third party rights outside the Federal Republic of Germany.

We cannot be held liable for damages, resulting from the incorrect operation and non-adherence to the instructions laid down in this documentation. We are not liable for losses in profit and resulting damage thereof from the non-adherence to safety instructions and warnings. We undertake no liability for damage, resulting directly or indirectly from the use of accessories and/or consumable products, which have been neither delivered nor certified by bar.

The products manufactured by bar GmbH are designed to give a long service life. They correspond to the state of the art for science and technology and are individually tested in all functions before dispatch. The electrical and mechanical construction corresponds to valid standards and guidelines. bar constantly carries out ongoing tests on the products and the marketplace, to ensure the further development and improvement of their products.

In case of faults and/or technical problems, please contact our service department. We can assure you, that immediate appropriate measures will be introduced. Valid here are the Terms of Warranty from bar GmbH, which we will send to you upon request.

Intended Use

The Position indicator bar-miniswitch® is a device for optical display and electrical messaging of intermediary and end positions of actuators, working on industrial fittings. Just before reaching the end position an electrical signal is generated, e.g. for feedback to the process control unit.

Any other application of this device is to be considered to be outside the intended use. If you have any questions, or would like to use the unit for another purpose, please contact our customer service department. We will be pleased to help with the necessary configurations.

Guarantee

For this device, we undertake the warranty of faultless condition for a duration of six months within the framework of our Conditions of Warranty. Parts subject to wear-and-tear are excluded from this warranty. The claim is invalidated, when tampering is carried out by persons, who are hereby not authorised by bar GmbH.

Inside the warranty period of time, we will repair damage or faults without cost, which can be provenly traced back to a factory error, insofar as this is registered by us immediately upon discovery, at the latest however inside a time span of six months following the date of delivery. The warranty cover will be made according to our estimation, through costfree repair maintenance of the faulty part(s) or exchange of those parts with faultless parts.

Send the units, for which the claim against warranty is being made, carriage-paid and with a copy of the invoice i.e. the delivery note to bar GmbH. Please get in con-

tact with our customer service department before sending the goods.

Obligations of the Customer

The owner/operator of this device has to ensure, that only persons who

- know the rules about safety at work and prevention of accidents
- have been instructed in the operation of this device
- have completely read and understood these instructions

can use and operate this device.

Persons, who operate this device, are obliged:

- to observe all rules pertaining to safety at work and the prevention of accidents
- to read these instructions thoroughly.

Authorised Personnel

Persons to be seen as authorised, are those with a successfully concluded professional training, technical experience, as well as knowledge of the appropriate standards and guidelines, and who are in a position, to appreciate the tasks they are delegated, and lastly to recognise and act upon possible dangers arising.

Operators of the Position Indicator

Persons to be seen as authorised, are those who have been instructed in the operation of a position indicator and have read and fully understood these instructions.

Personnel for Installation and Care

Persons to be seen as authorised, are those who have been instructed in the importance and consequences of position indicators and have read and fully understood these instructions.

 
 
 
Technical Data

Technical Data		
Description	The opto-electrical position indicator bar-miniswitch® is self-adjusting. It was specially conceived for smaller actuators and requires a minimum of space for mounting. The electrical connections are pluggable.	
Design	Compact construction, directly mountable	
Installation dimensions	50 x 25 mm – Pinion extension 15 mm with adapter: 80 x 30 mm – Pinion extension 20 i.e. 30 mm	
Constructional features	self-adjusting – with mechanical micro-switches or inductive switches	
Mounting position	as desired	
Protection type	MS-...: IP 67 (standard-version) MS-UL-...: IP 68 10m 72h (UL/CSA-version)	
Supply voltage	<ul style="list-style-type: none"> • mechanical: max. 250 V/AC, direct current max. 1 A • inductive: 5 to 30 V/DC, direct current max. 100 mA 	
Material	<ul style="list-style-type: none"> • housing: plastic • screws: stainless steel A2 	
Switching function	<ul style="list-style-type: none"> • mechanical: changer • inductive: PNP-changer 	
Ambient temperature	<ul style="list-style-type: none"> • mechanical: -20 °C to +70 °C • inductive: -20 °C to +70 °C 	
Connection	Plug connection M12, 4-pole DIN EN 61076-2-101	
Cable	Ø 6 – 8 mm, 0,75 mm ²	
Weight	80 – 130 g, depending on the different models:	
Mounting heights	There are different mounting heights H, depending on the different models:	
	Model with Pinion extension 15 mm	Model with Pinion extension 20 mm
	MS-M2-50/25-15 and MS-D2-50/25-15	MS-M2-50/25-20 and MS-D2-50/25-20
Certificate	UL CSA Nr. 80054905	

Dimensioned Drawing

Mounting heights




50 x 25 mm – shaft extension 15 mm

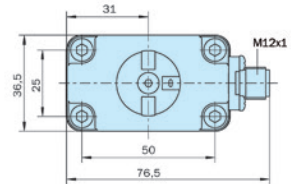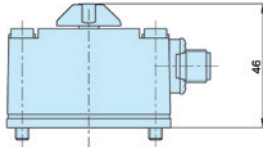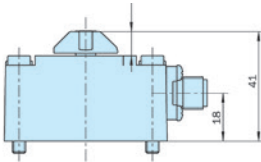

For shaft extension 15
MS-M2-50/25-15 and
MS-D2-50/25-15

For shaft extension 20
MS-M2-50/25-20 and
MS-D2-50/25-20

   With adapter: 80 x 30 mm – shaft extension 20 / 30 mm

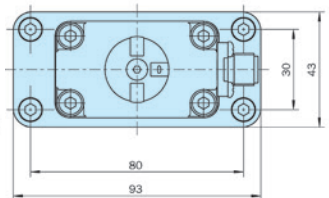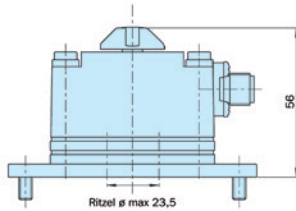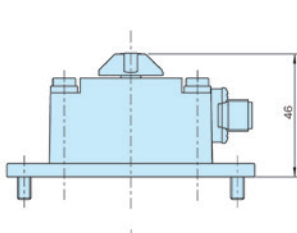

For shaft extension 20
MS-M2-80/30-20 and
MS-D2-80/30-20

For shaft extension 30
MS-M2-80/30-30 and
MS-D2-80/30-30

Delivery and Unpacking

Controlling the delivery

The unit is dispatched from bar and transported by selected transport companies i.e. package deliverers. At the point of arrival on your premises you should check the following:

- Are the number of packages that arrived the same as on the bar delivery note?
- Is the packaging free from visible signs of damage?
- Are the unit(s) and the accessories free from visible signs of damage?
- Are there any signs of careless handling during transport (e.g. burn marks, scratches, paint)?

To be able to present all claims against the transport companies, you should document all possible transport damage (e.g. with photographs and a written report), before you unpack the unit. bar is not responsible in any way for transport damage and can not accept responsibility or liability in any way whatsoever.

Scope of delivery

 
Carefully remove the transport packaging. Please observe all laws and regulations for the disposal of packaging materials. After packing everything out, you should have the following parts before you:

- Opto-electrical position indicator
bar-miniswitch®

Depending on order, the following optional extras:

- Adapter for differing pinion extension
- Position indicator with screw
- Plug
- Connecting cable

Check the scope of delivery with the delivery note and the order documentation. Any differences should be registered immediately to bar. Later complaints about incomplete or damaged deliveries cannot be accepted.

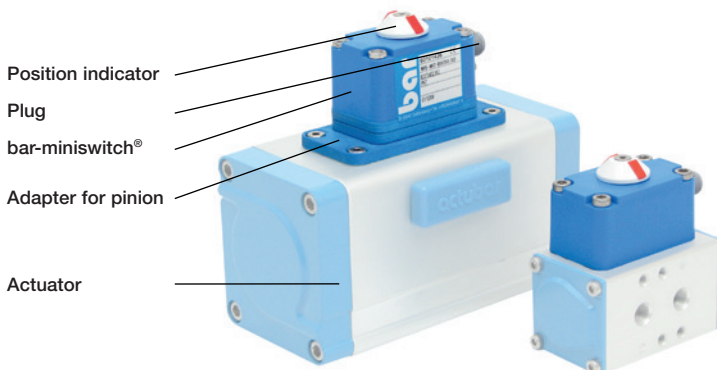

Versions and Certificates



Fig. 1: label standard version

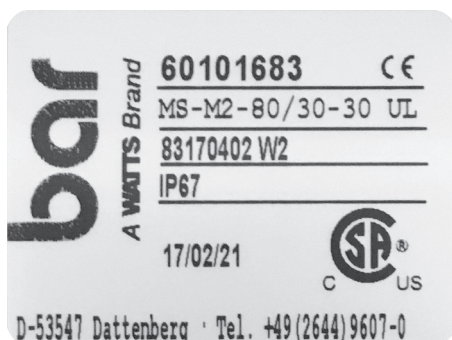 


Fig. 2: label UL/CSA certified version

 
Mounting and Commissioning

Mounting

⚠ WARNING

Mounting may only be carried out by suitably qualified skilled persons. Otherwise there is a danger of electric shock and defective installation.

1. If so required, fasten the adapter for raised pinions to the bar-miniswitch® with 4 screws from underneath.
2. Position the bar bar-miniswitch® on top of the actuator. Next insert the nose-piece of the position indicator (1) in the corresponding groove in the actuator shaft.
3. Fasten the bar-miniswitch® (i.e. the adapter) with 4 screws to the actuator.
4. Screw-on the plug (M12, 4-pole) with the correct orientation.
5. Place the optional position indicator on top. Thereby insert the nose-piece in the groove.
6. Fix in place the position indicator with a screw.

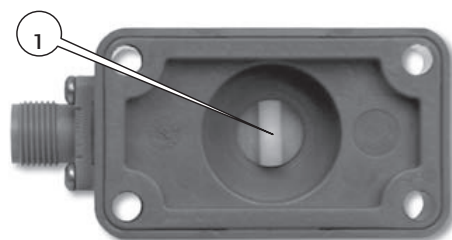

⚠ ATTENTION

 
 
Mount the unit only according to the description in this section. Otherwise the functionality can be restricted.

Connecting

⚠ WARNING

The electrical installation may only be carried out by qualified skilled personnel. Otherwise there is a danger of electrical shocks.

Circuit diagram

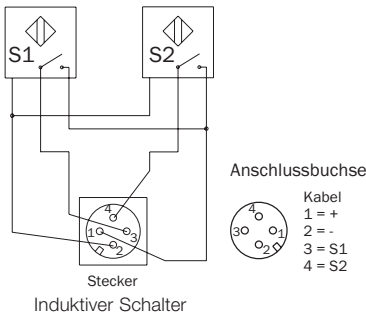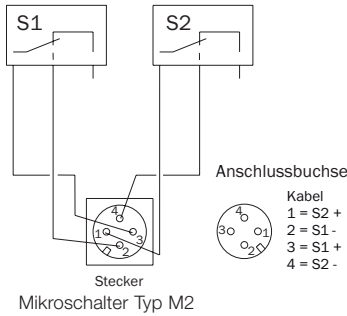

Commissioning

NOTE

The bar-miniswitch® is designed as self-adjusting. Therefore there is no need for setting or adjustment work.

1. Let the actuator switch 2-times, so that the bar-miniswitch® can find the zero position.

2. Check whether the position indicator agrees with the valve positioning. If not, then either the valve or the actuator is wrongly mounted.
3. Switch on the supply voltage.
4. Check, if the electrical switching signal agrees with the position indicator.
5. When all checks have been successfully carried out, then mounting and commissioning have been completed.

Cleaning

⚠ WARNING

Never use aggressive cleaners or materials, to clean the housing of the bar-miniswitch®. This can lead to damage to the housing.

1. Clean the housing of the bar-miniswitch® with a clean, slightly-moistened cloth.
2. In the case of a hardened-on dirt, use a normal household cleaner according to the instructions on the packaging on the cleaner.

Maintenance

⚠ WARNING

Never open the housing of the bar-miniswitch®. This can lead to damage to the unit and the loss of all warranty claims.

The bar-miniswitch® works maintenance-free. In case of defects, which take place inside the warranty time, remove the bar-miniswitch®, and after telephoning us, send it to the address as shown on the rear side.

Declaration of Conformity

Name und Anschrift des Herstellers:
Name and address of the manufacturer:

bar pneumatische Steuerungssysteme GmbH
Auf der Hohl 1, 53547 Dattenberg / Germany

Diese Erklärung bezieht sich nur auf das Produkt in dem Zustand, in dem es in den Verkehr gebracht wurde.
Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Rücksprache mit uns umgebaut oder verändert wird.
This declaration relates exclusively to the product in the state in which it was placed on the market.
The declaration loses validity, if the product is modified without agreement of company bar.

Hiermit erklären wir, dass das nachstehend beschriebene Produkt
Herewith we declare, that the following product

Produktbezeichnung: **Endlagerrückmeldung für pneumatischen Schwenkantriebe,**

Product denomination: **Limit switch box for pneumatic part turn actuators**

Serien-/Typenbezeichnung / *model/type:* **bar-miniswitch Typ/type MS-D2 und/and MS-M2**

nach den Anforderungen folgender Richtlinien hergestellt wurde:
was manufactured according to the following directives:

2014/65/EU Niederspannungsrichtlinie / Low voltage directive

2014/30/EU Elektromagnetische Verträglichkeit EMV / EMC

2011/63/EU Beschränkung bestimmter gefährlicher Stoffe / Restriction of certain hazardous substances (RoHS)

Die Einhaltung der in den technischen Daten und Sicherheitshinweisen beschriebenen Betriebsbedingungen ist sicherzustellen.
Please take care about the technical data and the relevant warning and safety notices.

Angewandte harmonisierte Normen:

Where appropriate harmonised Standards used:

EN 61058-1:2002+A2:2008
EN 61000-4-4

EN 60947-5-2
EN 61000-4-5

EN 60947-5-6
EN 61000-4-6


EN 61000-4-2
EN 55011

EN 61000-4-3
EN 50581:2012

Bevollmächtigter für die Zusammenstellung der technischen Dokumentationen (EU-Adresse):
The person authorised to compile the technical documentation (must be established within EU)

Dattenberg, 31.07.2015
Ort, Datum
Place, Date

 Rosignol, Antoine, Managing Director
Name, Vorname und Funktion des Unterzeichners
Surname, first name and function of signatory

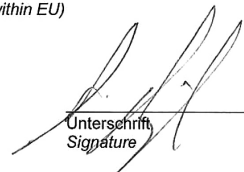

Unterschrift
Signature

The bar products are comprehensively tested. The company bar therefore only guarantees the replacement or – at its sole discretion – the free repair of those components of the delivered products which, in the opinion of bar, have demonstrable manufacturing defects. Warranty claims due to defects or defects of title can be asserted within one (1) year from delivery/transfer of risk. Excluded from the warranty are damages due to normal product use or friction as well as damages due to changes or unauthorized repairs to the products for which bar rejects any claim for damages (direct or indirect). (Please refer to our website for detailed information.) All deliveries are subject to the General Conditions of Sale which can be found at www.bar-gmbh.de.

The descriptions and images contained in this product data sheet are for informational purposes only and are not guaranteed. bar GmbH reserves the right to make technical and constructive changes to its products without prior notice.

Warranty: All purchases and sales contracts expressly require the Purchaser to accept the General Terms and Conditions of Sale and Delivery which can be found on www.bar-gmbh.de/agb. bar GmbH hereby objects to any deviating or additional condition to the General Terms and Conditions of Sale and Delivery which has been communicated to the Purchaser in any form without the written consent of a bar GmbH representative.

bar

A **WATTS** Brand

bar pneumatische Steuerungssysteme GmbH

Auf der Hohl 1 • 53547 Dattenberg • Deutschland
Tel. +49 (0)2644 96070 • Fax +49 (0)2644 960735
bar-info@wattswater.com • www.bar-gmbh.de