

bar-agturn®

Pneumatic rotary actuator
Type GD/GS

Translation of the original operating manual



Contents

1.	General information	4
1.1	Reference documents	4
1.2	Validity of the operating manual.....	4
1.3	Notes to operating manual.....	4
1.3.1	Signal words and symbols	4
1.3.2	Explanation of the structure of the safety instructions.....	6
1.3.3	Descriptions in figures	6
1.4	Responsibility of the operator	6
2.	Safety	7
2.1	General Safety Instructions.....	7
2.2	Intended use	7
2.3	Foreseeable misuse	7
2.4	Organizational measures.....	7
2.4.1	Modification or changes to the rotary actuator	7
2.4.2	Replacement of defective parts.....	7
2.5	Protective equipment	7
2.6	Personnel qualification.....	8
2.7	Dangers when handling the pneumatic rotary actuator	10
2.7.1	Dangers during assembly and disassembly.....	10
2.7.2	Dangers during functional checks, commissioning and operation	13
2.7.3	Dangers when used in explosion-protected areas	14
3.	Product description	15
3.1	Overview of different models	15
3.2	Type plate	17
3.3	Product and function description.....	18
3.4	Operating and display elements	19
3.5	Accessories.....	20
4.	Transport and storage	20
4.1	Scope of delivery	20
4.1.1	Incoming goods inspection	20
4.2	Transport, packaging and storage	21

5.	Installation	22
5.1	Installation conditions	22
5.2	Before installation.....	22
5.3	Installation of the valve.....	23
5.4	Installation of the pneumatic connection	24
5.5	Pressure test of the pipe section	24
6.	Commissioning and operation	25
6.1	General information for commissioning of different variants	25
6.2	Setting the end positions	25
6.2.1	Adjustment of swivel angle for mounting variants F/E.....	28
6.2.2	Adjustment of swivel angle for mounting variants G/H.....	29
6.2.3	Adjustment of the swivel angle via the cover.....	29
7.	Maintenance and repair	30
8.	Troubleshooting.....	30
9.	Repair and spare parts	31
9.1	Type GD-032 (schematic diagram))	31
9.2	Type GS-075 (schematic diagram).....	32
9.3	Type GD-076/180 (schematic diagram)	33
9.4	Type GD-146/180 (schematic diagram)	34
10.	Disassembly.....	35
10.1	Disassembly of the rotary actuator	35
11.	Disposal	35
12.	EU Declarations.....	36
12.1	Declaration of incorporation according to Directive 2006/42/EC	36
12.1	ATEX Declaration of Conformity.....	37
13.	Annex / Technical data.....	38

1. General information

This operating manual is a part of the product. The operating manual must be kept for the entire life of the product and must be passed on to each subsequent owner of the product.

The operating manual must always be available at the place of operation.

1.1 Reference documents

This manual, the data mentioned and design data sheets, additional assembly and maintenance instructions as well as further information – also in other language versions, can be obtained from:

bar pneumatische
Steuerungssysteme GmbH

Auf der Hohl 1
53547 Dattenberg

Tel.: +49 (0)2644-9607-0
Fax: +49 (0)2644-960735

Email: bar-info@wattswater.com
www.bar-gmbh.de

1.2 Validity of the operating manual

This operating manual is valid for the following bar-agturn rotary actuators starting from year of construction 2019:

- Type GD-032 till 040
- Type GD/GS-052 till 400

1.3 Notes to operating manual

The safety and hazard statements in the document are intended for your protection, the protection of third parties and the protection of the product. The instructions must therefore be observed.

1.3.1 Signal words and symbols

DANGER

... indicates a hazard that, if not avoided, will result in death or serious injury.

WARNING

... indicates a hazard that, if not avoided, could result in death or serious injury.

CAUTION

... indicates a hazard which, if not avoided, could result in minor or moderate injury.

NOTE

... indicates important information (e.g. Material damage) but not hazards.



Electric voltage!

The text passages marked with this symbol inform you about dangerous situations with danger to life and health of persons due to electrical voltage.



Corrosive substances!

The text passages marked with this symbol inform you about dangerous situations caused by corrosive substances.



Hot surface!

The text passages marked with this symbol inform you about dangerous situations with a risk of burns due to hot surfaces.



Cold surface!

The text passages marked with this symbol inform you about dangerous situations with a risk due to cold surfaces.



Suspended load!

The text passages marked with this symbol inform you about dangerous situations with a risks due to suspended load.



Hand injuries!

The text passages marked with this symbol inform you about dangerous situations resulting in hand injuries caused by bruising or punching. The activities described in the relevant text passage must be performed with the utmost care to avoid dangerous situations and resulting injuries such as loss of limbs.



Use head protection!

Notes with this symbol indicate that a head protection must be worn.



Use protective clothing!

Notes with this symbol indicate that a protective clothing must be worn.



Use hand protection!

Notes with this symbol indicate that a hand protection must be worn.

1.3.2 Explanation of the structure of the safety instructions

A safety instruction is initiated with a signal word describing the severity of the danger („Chapter 1.3.1 Signal words and symbols“).

WARNING

Type or source of danger (possibly with warning signs according to DIN EN ISO 7010)

Consequences in case of not following the instruction

- Avoidance of danger

1.3.3 Descriptions in figures

The figures in this operating manual are intended to help you understand the facts and procedures.

The descriptions in the figures are exemplary and may differ slightly from the actual appearance of your product.

1.4 Responsibility of the operator

- The installation, electrical and pneumatic connection as well as the commissioning of the product may only be carried out by qualified personnel in accordance with the instructions described in this operating manual.
- The product may only be operated and maintained by personnel of the legal minimum age and the corresponding personnel qualification
- This operating manual is an integral part of the product and must be available to the personnel at all times. This operating manual must be read and understood before the first commissioning
- The operating and technical personnel must be instructed about safety devices of the product as well as safe working methods.
- The product may only be operated in perfect condition. No safety devices may be removed or disconnected.

2. Safety

2.1 General Safety Instructions

Personnel assigned to work on the rotary actuator must read the operating instructions before starting work and, in particular, understand the chapter "Safety" before starting work. This is particularly valid for personnel working only occasionally on the rotary actuator.

2.2 Intended use

- The product is designed for use in process engineering systems.
- The product is used for the automatic actuation of industrial valves continuously moving between the end positions by means of compressed air. Operation with other gases or liquids must be approved in writing by the manufacturer.
- The product is suitable for the automation of valves in order to shut-off liquids and gases in pipelines and containers.
- The operating values, limit values and setting data specified in the operating instructions and the corresponding data sheet must not be altered without the written permission of the manufacturer.
- Intended use also includes the observance of these operating instructions.

2.3 Foreseeable misuse

Any use other than that described in „Chapter 2.2 *Intended use*“ and any use not approved by the manufacturer is considered as unintended!

2.4 Organizational measures

2.4.1 Modification or changes to the rotary actuator

The unauthorized modification and/or changes to the product is prohibited for safety and licensing reasons (CE). Changes to the product may only be made after consultation and written approval from the manufacturer.

2.4.2 Replacement of defective parts

Replace parts of the quarter-turn actuator that are not in perfect condition immediately with original spare parts.

Please note that only original spare and wear parts of bar GmbH are to be used.

In the case of usage of the third-party parts, it is not ensured that they are designed and manufactured to suit the requirements.

2.5 Protective equipment

If necessary, the protective equipment shall be used. Keep your hair and clothing away from moving parts. If necessary, wear a hairnet and do not wear jewelry such as necklaces and rings!



Use head protection!

Wear suitable head protection during transport.



Use protective clothing!

Wear suitable protective clothing during commissioning, maintenance and troubleshooting.



Use hand protection!

Wear suitable hand protection during transport, commissioning, maintenance and troubleshooting.

- Instructed persons must operate the rotary actuator and be able to detect possible damage and dangers on the rotary actuator.
- Instructed persons with technical training must also be aware of the dangers of handling pressurized equipment, hot and cold surfaces, harmful and hazardous materials and the process of installing and removing the valves in a process line, the specific and potential risks of the process and the most important safety regulations.
- Trained electricians must read and understand electrical circuit diagrams, commission, put electric machines into operation, service and maintain them, wire switch and control cabinets, install control software, ensure the functionality of electrical components and identify potential hazards in handling electrical and electronic systems.
- Trained pneumatic specialists must read and understand pneumatic circuit diagrams, put pneumatic systems into operation, service and maintain them, disconnect and connect pneumatic hoses, ensure the proper functioning of pneumatic components, assess the work performed on the pneumatic system and identify potential hazards.

2.6 Personnel qualification

Only trained or instructed personnel who has known and understood the operating instructions as well as the possible dangers of the rotary actuator is allowed to work with the rotary actuator. The responsibility of the personnel for operation, maintenance and repair must be clearly defined by the operator.

Personnel to be trained, instructed or undergoing training may work on the rotary actuator only under the constant supervision of an experienced person.

The individual activities on the rotary actuator require different personnel qualifications which are listed in the following table. The different qualifications are characterized by the following skills and knowledge:

Read this table as follows:

"The electrical installation requires the qualification of a qualified electrician

Activities	Instructed persons	Instructed persons with technical training	Electricians	Pneumatic specialists
Installation		X		
Electrical installation			X	
Pneumatic installation				X
Setting and equipping		X		
Commissioning		X		
Troubleshooting	X			
Cleaning	X			
Troubleshooting, repair and maintenance of mechanics		X		
Troubleshooting, repair and maintenance of electrics			X	
Troubleshooting, repair and maintenance of pneumatics				X
Functional checks		X		
Shutdown/stopping	X		X	
Transport	X			
Disposal	X			

Tab. 2-1 Overview of the required personnel qualifications

2.7 Dangers when handling the pneumatic rotary actuator

This product of bar GmbH is built according to the state of the art and the recognized safety rules. Nevertheless, there remains a residual risk and may cause dangers to the life and limb of the user or third parties or impairments of the product and other material assets in use, if:

- the product is not used as intended,
- the product is operated or repaired by untrained personnel,
- the product is improperly changed or modified and/or
- the safety instructions are not observed.

Eliminate faults that may affect safety.

2.7.1 Dangers during assembly and disassembly

WARNING



Electric voltage!

There is danger to life when working on electrical components.

- The electrical connections may be performed only by qualified electricians.
- When working on the components, have the voltage released by a qualified electrician and secured against being switched on again.
- Let a qualified electrician check that no current is present.

WARNING



Corrosive substances!

Depending on the type of medium, there may be danger to life when in contact with the medium.

- Check the properties of the medium.
- Protect yourself and your environment from harmful or toxic substances.
- Follow the safety instructions in the manufacturer's safety data sheets.
- Make sure that no medium can get into the pipeline, valves during assembly work.
- Make sure that personnel working with the valves and installing or repairing the valves have received appropriate training.

WARNING



Very cold and hot surfaces!



- The body of the valve can become very cold or very hot during operation.
- Wear protective gloves and protective clothing to protect against frostbite or burns.
- Make sure that personnel working with the valves and installing or repairing the valves have received appropriate training.

WARNING



Danger of crushing hands and other body parts!

There is a risk of injury during assembly/disassembly by movements of the ball. The shut-off body (e.g. ball or disc) of the valve works as a separating element. It makes no difference whether a rotary actuator is mounted or not. The position of the ball may change during transport or handling of the valve.

- Keep hands and fingers away with the compressed air supply connected.
- Always disconnect the compressed air supply from the rotary actuator before carrying out maintenance and repair work on the valve and when installing and removing the ball valve from the pipeline.
- Pay attention to movements of the ball.
- Keep hands, other body parts, tools and other objects out of the swivel range of the ball. Do not leave any foreign objects inside the pipeline.
- Perform works carefully when assembling, disassembling and sampling.

WARNING

Flying parts! Splashing medium!

There is a risk of injury when the valve is removed under pressure or with present medium. The disassembly or removal of a pressurised valve causes an uncontrolled pressure drop.

- Do not disassemble or remove the valve from the pipeline as long as the valve is pressurized.
- Always isolate the respective valve in the piping system.
- Depressurise the valve and remove the medium before working on the valve and the rotary actuator.

WARNING

Ejected parts!

When adjusting the rotary actuators and when the rotary actuator is opened under pressure, there is a risk of parts being ejected!

- Always disconnect the compressed air supply before maintenance, disassembly and repair!
- Never set the mechanical end positions on the actuator as long as there is pressure on connection 2 or 4.
- Make sure the pinion of the rotary actuator is moving in the correct direction.

WARNING

Welding works!

Welding and flying sparks can cause fires.

- Make sure that the prescribed safety precautions are taken before carrying out welding works.
- Inform the relevant employees such as security office, shift leader, company fire brigade.
- Apply for a written welding permit.
- Provide fire extinguishers.

WARNING

Uncontrolled start-ups

There is a risk of injury if pneumatic rotary actuators create a very high torque during actuation or by spring force.

- Secure the rotary actuator against any unintentional start-up or unexpected spinning.
- Work on the pneumatic rotary actuators in a prudent way.
- In case of single-acting rotary actuators (type GS), make sure that the rotary actuator is in the home position (relaxed springs) when disassembling.

CAUTION

Hand injuries!

When mounting the rotary actuator on the valve spindle, the rotary actuator is pushed to the connection point/flange of the valve.

When disassembling the rotary actuator or removing the rotary actuator from the valve spindle, the parts can slip down.

There is danger of crushing the hands!

- Carefully pull off the rotary actuator.
- Keep fingers and hands away from the connection point.

NOTE

Material damage to valve spindle!

Material damage can occur if you use built-on rotary actuators as levers.

- Do not use built-on actuators as levers as they could damage the actuator and the valve.

2.7.2 Dangers during functional checks, commissioning and operation

WARNING

Bursting parts! Escaping media!

There is danger to life if the maximum permissible pressure and temperature ranges of the valve are insufficient for the operating conditions of the system. There is a risk of injury and the risk of material damage by wrongly selected materials.

In addition, there is a risk of damage to the piping system.

- Only use the valves that are designed for the operating conditions.
- Make sure that the selected materials of the parts of the valve coming in contact with the medium are suitable for the media used.

WARNING



Escaping medium!



There is a risk of injury from escaping medium as a result of leaks (scalding, hazardous substances).

- Protect yourself from thermal or chemical burns.
- Leave the danger area in case of leakage and keep third persons out of the danger zone. Use appropriate barriers or name supervisors.

WARNING



Danger of being pulled in, danger of crushing and locking

Danger due to moving parts of the machine/valve which can be accessed through assembly, disassembly, removable covers at openings for functional checks, sampling, etc. and through automatically operated valves.

- Keep hands and fingers away with the compressed air supply connected.
- Please note that single-acting rotary actuators can move the valve to the "open" or "closed" position when closing or disconnecting the compressed air supply.
- Perform works carefully when commissioning, making functional checks and sampling.

WARNING



Risk of burns!

Devices and system components can become very hot during operation.

- Wear protective gloves and protective clothing to protect against burns.
- At operating temperatures $> 65^{\circ}\text{C}$ a short contact (approx. 1s) of the skin with the surface of the machine/valve may cause burns (DIN EN ISO 13732-1).
- At operating temperatures $= 60^{\circ}\text{C}$ a long contact (approx. 3s) of the skin with the surface of the machine/valve may cause burns (DIN EN ISO 13732-1).
- At operating temperatures $55^{\circ}\text{C} - 60^{\circ}\text{C}$ a long contact (approx. 3s to 10s) of the skin with the surface of the machine/valve may cause burns (DIN EN ISO 13732-1).

CAUTION

Self-loosing components!

Components and fasteners may become loose if not properly installed.

- Observe the information on tightening torques in this operating manual.
- Check the tightening torque of screw connections and tighten with the torque wrench, if necessary.

CAUTION

Noise!

When venting the pneumatic rotary actuator, noise can be hazardous to health.

- Use silencer at vent port or take other personal protection measures.

2.7.3 Dangers when used in explosion-protected areas

DANGER

Danger of explosion

An explosion can occur if the following protective measures are not observed:

- Establish an internal electrically conductive equipotential bonding between the rotary actuator and all metal mounting parts and the pipeline.
- Protect the surfaces against inadmissibly high temperatures due to solar radiation. Shading covers can possibly be required.
- When selecting the pneumatic valves and the end position feedbacks, pay attention to the combination with Ex-approved products.
- Avoid sparking when using the tool.
- Avoid dust accumulation.
- Do not install rotary actuators in pit-like cavities if there is a predictable dust accumulation.
- Do not carry out leak detection with ultrasonic transmitters.

3. Product description

3.1 Overview of different models

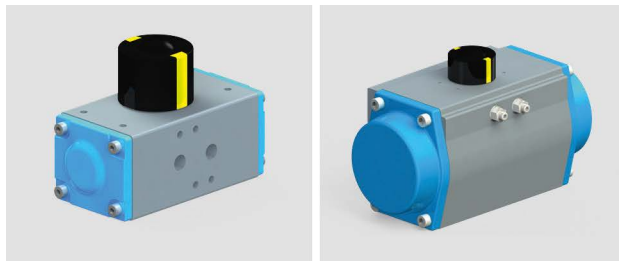


Fig. 3-1 Product variants bar-agturn GD-032 till 040, GD/GS-052 till 160

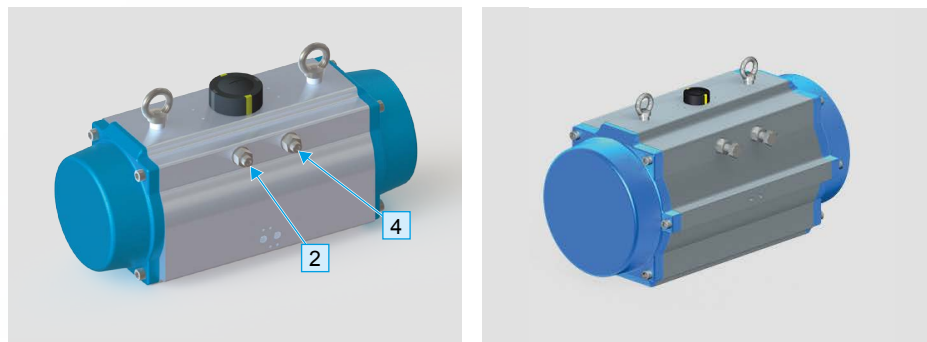


Fig. 3-2 Overview of components bar-agturn GD/GS-196 bis 270, GD/GS-300 bis 400

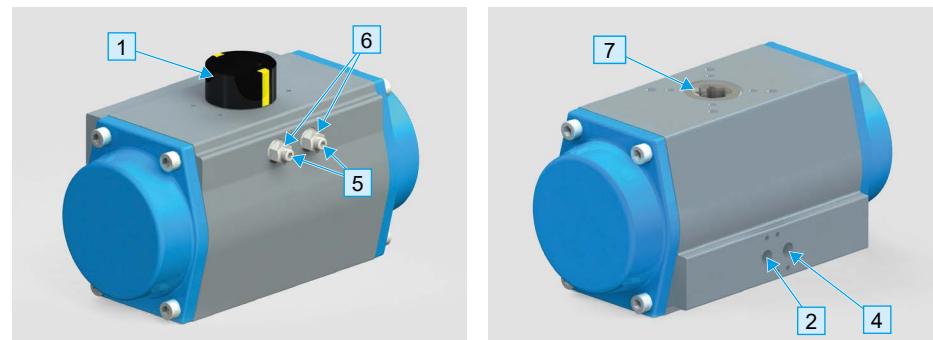


Fig. 3-3 bar-agturn GD/GS-125 overview of components (left: top view, right: bottom view)

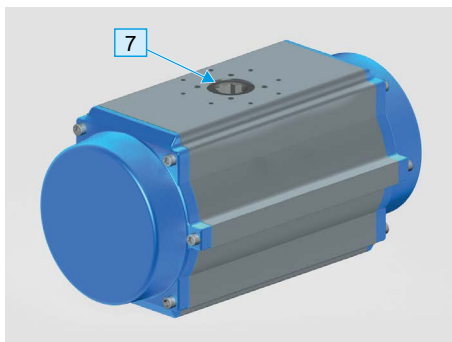
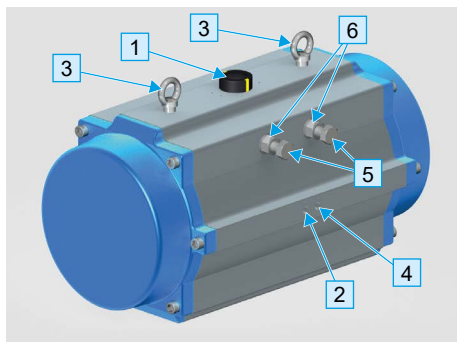


Fig. 3-4 bar-agturn GD/GS-300 overview of components (left: top view, right: bottom view)

Legend

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Position indicator and interface to the end position feedback as well as position controllers according to VDI/VDE 3845 (Nemur) 2. Pneumatic interface connection of the actuator according to VDI/VDE 3845 (Nemur) 3. Ring nut from GD/GS-160 | <ol style="list-style-type: none"> 4. Pneumatic interface connection of the actuator according to VDI/VDE 3845 (Nemur) 5. Adjusting screws 6. Lock nuts of the adjusting screws 7. Valve interface according to EN ISO 5211 |
|---|---|

3.2 Type plate

The following figures and the legend contain examples of different versions of a pneumatic rotary actuator.



Fig. 3-5 Type plate of single-acting and double-acting rotary actuator

Legend (example values)

63120005/63000005	bar article number
GD-083/090-F05/F07-V17-F	Article/order designation (see data sheet)
02/02/2023	Date of manufacture (year)
12 springs	Number of safety springs for single-acting actuators
Md=15.3 Nm/bar	Torque per 1 bar of control pressure
Pmax=8 bar	Permis. max. control pressure for the pneum. rotary actuator
Last line	ATEX marking

3.3 Product and function description

The pneumatic rotary actuator bar-agturn is actuated exclusively with compressed air or other suitable control media via control valves. The swivel angle range is 90° and can be set as standard in both end positions (0° and 90°) from + 5° to -5°.

The pneumatic rotary actuator is delivered as required in a double- and single-acting function (with safety springs which return the rotary actuator to the basic position). The respective valve position is indexed via the standard optical position indicator (see Fig. 3-11 and Fig. 3-12). The end position feedback device can be ordered as an accessory.

The sizes GD-032 till 40 are designed only as double-acting devices.

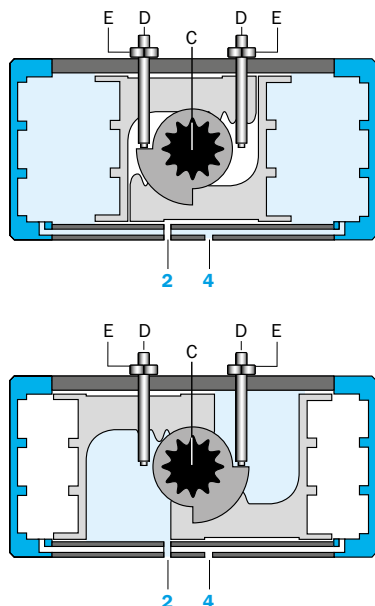


Fig. 3-6 Rotary actuator bar-agturn function „double-acting“ GD-032 till 160

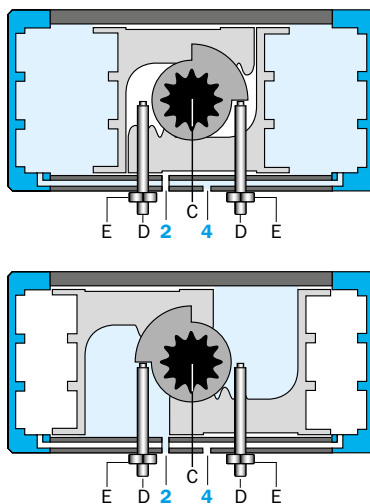


Fig. 3-7 Rotary actuator bar-agturn function „double-acting“ GD-196 till 400

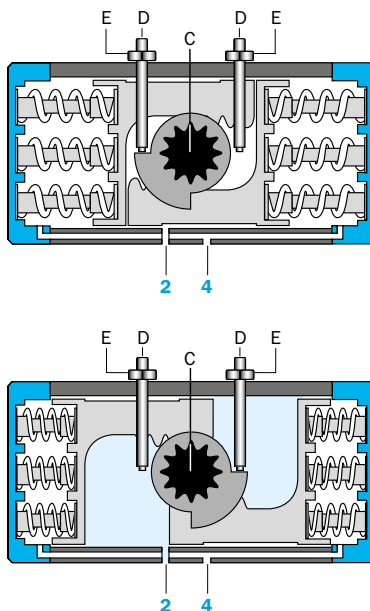


Fig. 3-8 Rotary actuator bar-agturn function „single-acting“ GS-052 till 160

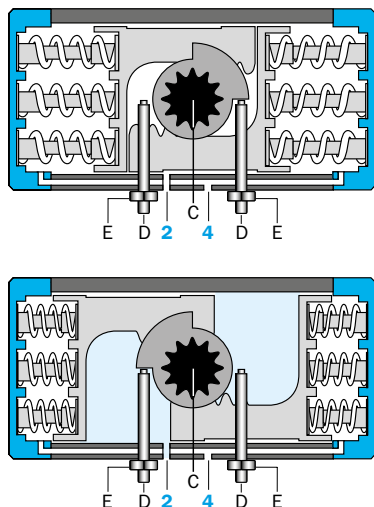


Fig. 3-9 Rotary actuator bar-agturn function „single-acting“ GS-196 till 400

On request, the rotary actuator can be equipped with an option for stroke adjustment via the cover. Included in the series for drives with swivel angle 120°/135°/180°.

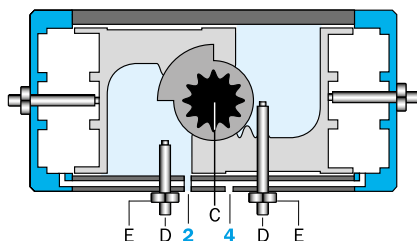


Fig. 3-10 Stroke limitation via cover

3.4 Operating and display elements

The positions of the valve are indicated by an optical position indicator mounted on the rotary actuator. The yellow and black clips can be remounted according to the installation situation.



Fig. 3-11 Operating and display elements of the rotary actuator bar-agturn
Longitudinal design = closed position
Transverse design = open position



Fig. 3-12 Operating and display elements of the rotary actuator bar-agturn
Longitudinal design = open position
Transverse design = closed position

In case of **longitudinal design** the position indicator shall be mounted as follows:

- Fig. 3-11 indicates the closed position
- Fig. 3-12 indicates the open position

Optionally the rotary actuator bar-agturn can be mounted **transversely to the pipe-line**. The position indicators are mounted as follows:

- Fig. 3-11 indicates the open position
- Fig. 3-12 indicates the closed position

NOTE

Make sure that the optical position indicator together with a ball valve always corresponds to the ball bore or, in the case of a butterfly valve, always corresponds to the disc.

3.5 Accessories

DANGER

Danger of explosion

An explosion can occur if components are operated with insufficient protection class and without approved explosion protection.

- When selecting the pneumatic valves and the accessories, pay attention to the combination with Ex-approved products.

Contact your bar customer service for selection of the right accessories:

- Throttle plates
- Silencer
- End position feedback devices
- Solenoid valves
- Positioner

4. Transport and storage

4.1 Scope of delivery

- Pneumatic rotary actuator bar-agturn
- Possibly ordered accessories

4.1.1 Incoming goods inspection

The following items must be checked at the time of delivery:

- Does the number of delivered transport containers correspond to the delivery note?
- Is the packaging free of visible damage?
- Are the product and accessories free of visible damages?
- Are there any evidences of not gentle handling during the transport (e.g., burns, scratches, colour)?

To have all the right for claim against the transport company, you have to document the possible external transport damages (e.g. with photographs and a written protocol) before unpacking the product.

bar GmbH is not responsible for transport damages and can take over no liability for that.

4.2 Transport, packaging and storage

DANGER



Suspended load!

When transporting, e.g. with a crane, there is a risk that parts fall down and people are seriously injured.

- Never exceed the permissible load of the hoisting equipment used.
- Use only suitable, approved and undamaged lifting slings for transport.
- If you connect the slings to the rotary actuator, they may only be used to transport the rotary actuator and not for the entire control device.
- Connect the slings so that the products can not be damaged.
- Exercise the utmost care when handling and balancing the load.
- Perform the works with constant eye contact with the load.
- Do not stay under or near the lifted load.
- Keep third persons out of the danger zone. Use appropriate barriers or name supervisors.

NOTE

If lifting slings are required for transport, they must be connected in such a way that the products are not damaged.

Lifting slings are mounted at the factory from size 160 (type GD/GS-160). The supplied slings are intended solely for the transport of the products to which they are mounted.

The products must be handled, transported and stored with care:

- There is no liability of the manufacturer for transport within the customer's territory or to the individual places of use.
- The products should be transported in their original packaging or on a pallet (or similarly supported) to the installation site and unpacked immediately before installation.
- When storing before installation, keep the products in a closed room and protect them from harmful influences such as dirt or moisture.
- The products must be stored in their original packaging and, if necessary, with the appropriate protective covers.
- In case of a longer storage period, the pneumatic rotary actuator must be operated at least once a year.
- Proper disposal of the packaging is the responsibility of the customer.

5. Installation

WARNING

Installation works

There is a risk of injury if this product is not properly installed, disassembled and put into operation.

- Make sure the personnel has received the appropriate training.
- Observe the safety instructions in „Chapter 2. Safety“.

NOTE

Check the technical parameters, in particular pressure and temperature, and the electrical voltage of the control valve before installing or commissioning the rotary actuator.

5.1 Installation conditions

The minimum space requirement can be found in the dimension drawing or dimension table („Chapter 13. Annex / Technical data“).

5.2 Before installation

Observe the following points before installation:

- The dew point of the control medium must be min. 10 °C lower than the lowest operating temperature! The max. temperature of the control medium is 45 °C!
- The rotary actuator is not suitable for accepting external lateral forces on the pinion as well as for permanent torsional vibrations in the end positions.

- When operating valves, considerable kinetic energy can be generated which is transmitted to the actuator. The user must ensure that the rotary actuator is adequately protected and that the below-mentioned switching times for soft-sealing flaps and standard ball valves for pure 90° rotary movement are not exceeded.

The following minimum switching times for the rotary movement of 90° must be observed:

Type (GD/GS)	Switching times
032 till 063	0,3 sec
075 till 125	0,7 sec
140 till 216	1,0 sec
240 till 400	2,0 sec

Tab. 5-1 bar-agturn minimum times for the rotary movement of 90°

The switching time can be reduced and adjusted by using silencers or throttle plates from our range of accessories.

We recommend hydraulic damping for critical applications.

For other valve types, in particular large-volume valves with low torque requirement, the operating conditions of the rotary actuator must be agreed with the manufacturer. We will be delighted to advise you.

5.3 Installation of the valve

MV*	Basic position		Swivel direction	Switched position	
	Piston position	Position indicator		Piston position	Position indicator
F					
E					
G					
H					

* MV = Mounting variants

Tab. 5-2 Mounting variants for rotary actuator bar-acturn (see also type plate)
View from above

Left-turning mounting variants F/E

Left-turning means that the actuator rotates counterclockwise when pneumatic port 2 is pressurized.

Right-turning mounting variants H/G

Right-turning means that the actuator rotates clockwise when pneumatic port 2 is pressurized.

Left-turning opening - Right-turning closing

In general, valves are opened by turning to the left, i.e. counterclockwise, and closing by turning to the right, i.e. clockwise.

With the appropriate selection of mounting variant you can thus ensure with single-acting rotary actuators that the valve is closed (spring force closing: F/E) or opened (spring force opening: H/G) in case of pressure failure.

Make sure that the optical position indicator together with a ball valve or flap always corresponds to the ball bore/disc.

Make sure that the maximum torques of the flange pattern used are not exceeded for the sake of design and operation!

Connecting surfaces must be free from oil and grease, clean and dry.

1. Place the rotary actuator on the valve spindle (7). If necessary, install prior required components such as, for example, shaft adapter, reduction, mounting bridges and/or centering.
2. Tighten the connecting screws on the flange pattern according to Tab. 5-3.

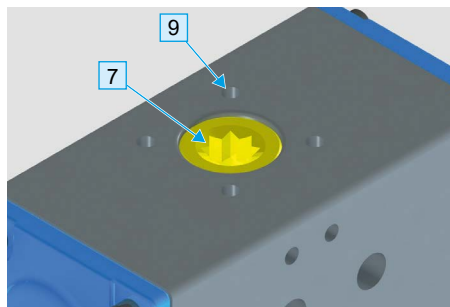


Fig. 5-1 View on rotary actuator from bottom = valve interface

- 7 Installation of the valve spindle / shaft adapter
- 9 Installation of the connecting screws

Observe the following tightening torques (unlubricated) when installing connecting screws:

Flange pattern	Screw size	Tightening torque [Nm]
F03	M5	5
F04	M5	5
F05	M6	8
F07	M8	20
F10	M10	40
F12	M12	70
F14	M16	174
F16	M20	342
F25	M16	174

Tab. 5-3 Tightening torques for connecting screws of rotary actuator – valve

5.4 Installation of the pneumatic connection

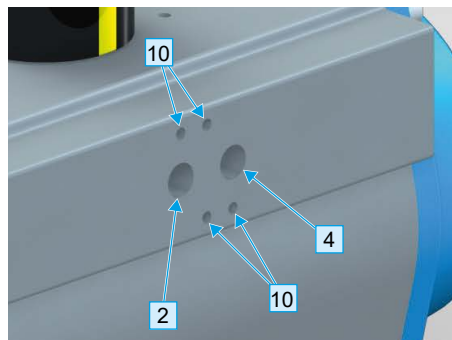


Fig. 5-2 Pneumatic connections of the rotary actuator bar-acturn

- 2** Pneumatic connection
- 4** Pneumatic connection
- 10** Threaded hole M5

Make sure that plugs or end caps are removed at the pneumatic connections 2 and 4, if necessary.

The single-acting rotary actuators are equipped with a silencer in the pneumatic connection (4) at the factory. Remove this before you connect NAMUR control valve.

Pneumatic connection for single-acting rotary actuators:

- Remove silencer in the pneumatic connection (4).
- Connect the pneumatic connection (2) to the compressed air supply line.

Pneumatic connection for double-acting rotary actuators:

- Connect the pneumatic connections 2 and 4 to the compressed air supply lines.

5.5 Pressure test of the pipe section

The following must be observed when making the pressure test of a pipe section with installed valves:

Carefully rinse newly installed piping systems to flush out any foreign objects.

Valve opened:

- The test pressure must not exceed the value of $1.5 \times PN$ as marked on the housing.

Valve closed:

- The test pressure must not exceed the value of $1.1 \times PN$ as marked on the housing.

6. Commissioning and operation

6.1 General information for commissioning of different variants

The bar-agturn rotary actuator (except for size 032) is equipped as standard with a mechanical end position adjustment on both sides.

The size GD-032 has a fixed stop at 0° and 90°.

For bar ball valves with pneumatic actuator, the end positions are pre-adjusted to 0° and 90° at factory. In case of bar GmbH automated butterfly valves with pneumatic actuator, the end positions are set at the factory in such a way that the butterfly valve opens approx. 4° when closed and 90° when opened. The automated valves are checked for function.

If you would like to make a new adjustment or alignment of the mechanical end positions on the rotary actuator bar-agturn, please observe the adjustment range of the mechanical swivel angle according to Fig. 6-1 as well as the following notes and descriptions.

Actuator size GD-052 till 400 are also available with an additional adjusting screw in the cover to further limit the swivel angle range.

For actuators with end position adjustment via the cover, the end position of the switching position is limited exclusively via the cover; this is the case for corresponding special actuators (-OA or -CA) or actuators with a swivel angle greater than 90°, e.g. 120°, 135° or 180°.

6.2 Setting the end positions

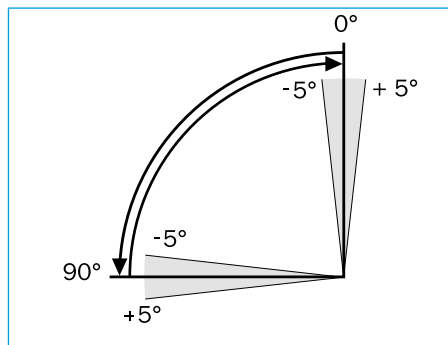


Fig. 6-1 Adjustable mechanical swivel angle range of the bar-agturn version 90° from size GD-040, GD/GS-052 till 400

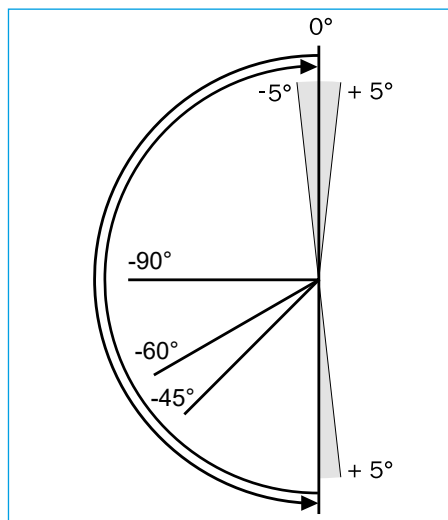


Fig. 6-2 Adjustable mechanical swivel angle range of the bar-agturn version 120°/135°/180° from size GD/GS-052 till 400, from GD-240 to GD-400 on request.

6.2 Setting the end position

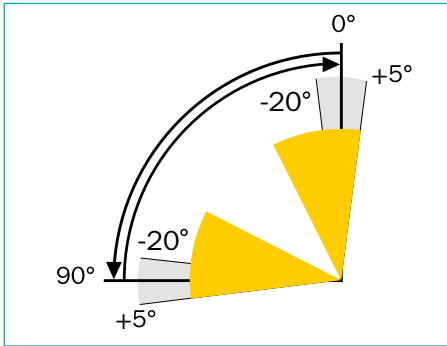


Fig. 6-3 Version with extended angle of rotation adjustment from GD-040 to GD/GS-160

Inner end position +5° to -20°

External end position +70° to +95° with 90° Actuators

Designation -XA = EXtended Adjustment

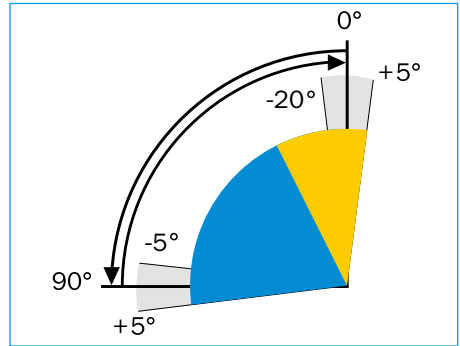


Fig. 6-5 Version as combination cover screw with extended angle of rotation adjustment from GD-052 to GD/GS-160

Inner end position +5° to -20°

External end position 0° to +95° with 90° actuators

Designation -CA = Combined Adjustment

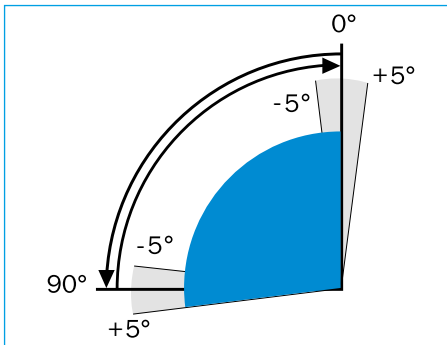


Fig. 6-4 Version with cover screw from GD-052 to GD/GS-216

Inner end position -5° to +5°

External end position 0° to +95° with 90° actuators

Designation -OA = Outer Adjustment

⚠ WARNING

Ejected parts!

When adjusting the rotary actuators and when the rotary actuator is opened under pressure, there is a risk of parts being ejected!

- Always disconnect the compressed air supply before maintenance, disassembly and repair!
- Never set the mechanical end positions on the rotary actuator as long as there is pressure on connection 2 or 4.
- Make sure the pinion of the rotary actuator is moving in the correct direction.

NOTE

Avoid pulling the O-ring on the adjusting screw into the thread of the actuator housing. Always pull back the O-ring before

Basically, the following applies:

The adjusting screws have a right-hand thread.

- Screwing in = turning clockwise reduces the swivel angle.
- Screwing out = turning counterclockwise increases the swivel angle.

For safety reasons, the adjusting screws may be screwed in or out by a maximum of 1-2 turns depending on the actuator size.

Turning in or out by 1 turn corresponds to an angle adjustment of up to 5°.

The adjusting screws must only be screwed out so far that the screw heads protrude only a few millimeters beyond the lock nut on the actuator housing.

When screwing in, make sure that the adjusting screws remain completely in the thread of the lock nut on the actuator housing.

Observe the following tightening torques (unlubricated) when tightening the lock nuts:

Type (GD/GS)	Nut size	Tightening torque [Nm]
040 till 063	M6	8
075 till 105	M8	20
125	M10	40
140 till 160	M12	70
196 till 240	M16	174
270	M20	342
300	M24	586
350 till 400	M27	873

Tab. 6-1 Tightening torques of bar-agturn lock nuts

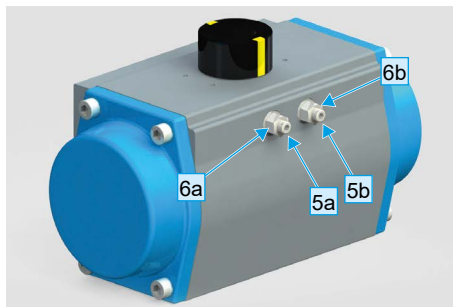


Fig. 6-6 Einstellung des Schwenkantriebs
bar-agturn

- 6a** Lock nut
5a Adjusting screw
6b Lock nut
5b Adjusting screw

6.2.1 Adjustment of swivel angle for mounting variants F/E

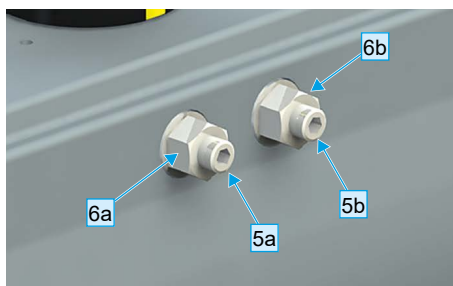


Fig. 6-7 Adjustment of the rotary actuator
bar-agturn in details

Setting the closed valve position

1. If this is not already the case, allow the actuator to swing into the closed position.
 - Double-acting actuators: Supply compressed air to port 4, then bleed air.

2. Loosen the lock nut (6b) of the adjusting screw (5b).
3. Adjust the closed valve position with the adjusting screw (5b) and lock the adjusting screw with the lock nut.
4. Open and close the valve and check the setting. If necessary, repeat the points 1 to 4. If you also want to adjust the other end position, continue with point 5.

Setting the open valve position

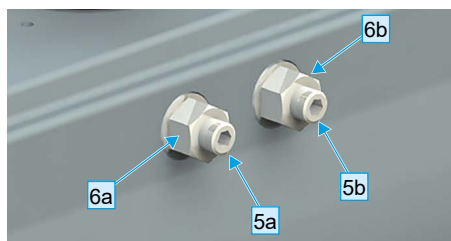


Fig. 6-8 Adjustment of the rotary actuator
bar-agturn in details

5. If this is not already the case, allow the actuator to swing into the closed position and vent the actuator.
6. Loosen the lock nut (6a) of the left adjusting screw (5a) and make the adjustment with the adjusting screw. Lock the adjusting screw with the lock nut.
7. Open and close the valve and check both end positions.
8. If the opening angle is correct, return the actuator to the closed position and vent the actuator. If the setting needs to be corrected again, repeat points 5 to 8.

6.2.2 Adjustment of swivel angle for mounting variants G/H

Setting the open valve position

1. If this is not already the case, allow the actuator to swing into the open position.
 - Double-acting actuators: Supply compressed air to port 4, then bleed air.
2. Loosen the lock nut (6b) of the right adjusting screw (5b).
3. Adjust the open valve position with the adjusting screw (5b) and lock the adjusting screw with the lock nut.
4. Close and open the valve and check both end positions. If necessary, repeat the points 1 to 4. If you also want to adjust the other end position, continue with point 5.

Setting the closed valve position

5. If this is not already the case, allow the actuator to swing into the open position and vent the actuator.
6. Loosen the lock nut (6a) of the left adjusting screw (5a) and make the adjustment with the adjusting screw. Lock the adjusting screw with the lock nut.
7. Close and open the valve and check both end positions.
8. If the setting is correct, return the actuator to the open position and vent the actuator. If the setting needs to be corrected again, repeat points 5 to 8.

6.2.3 Adjustment of the swivel angle via the cover (actuators 120°/135°/180°)

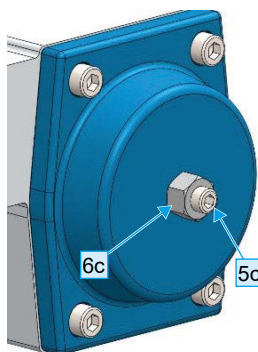


Fig. 6-9 Cover with adjusting screw for stroke limitation

6c Lock nut

5c Adjusting screw

Mounting variants F/E

For mounting variants F/E, set the closed valve position as described in chapter 6.2.1.1.

The procedure for setting the open valve position is as follows:

1. If this is not already the case, allow the actuator to swing into the closed position and vent the actuator.
2. Loosen the lock nut (6c) of the adjusting screw in the cover (5c) and make the adjustment with the adjusting screw. Lock the adjusting screw with the lock nut.
3. Open and close the valve and check both end positions.

4. If the opening angle is correct, return the actuator to the closed position and vent the actuator. If the setting needs to be corrected again, repeat points 2 to 4.

Mounting variants G/H

For mounting G/H, set the open valve position as described in chapter 6.2.1.

The procedure for setting the closed valve position is as follows:

1. If this is not already the case, allow the actuator to swing into the open position and vent the actuator.
2. Loosen the lock nuts (6c) of the adjusting screws in the cover (5c) and make the adjustment with the adjusting screw. Lock the adjusting screw with the lock nut.
3. Open and close the valve and check both end positions.
4. If the opening angle is correct, return the actuator to the open position and vent the actuator. If the setting needs to be corrected again, repeat points 2 to 4.

7. Maintenance and repair

The pneumatic rotary actuator bar-agturn works without maintenance.

In terms of operational safety, however, it is recommended to check them for function and to switch at least once a year but no later than after 100,000 switching cycles.

Do not use harsh detergents or abrasives to clean the housings. In principle, it is possible to repair the pneumatic rotary actuator by replacing the seal and wear parts sets.

NOTE

We recommend that you have the repair carried out by the company bar GmbH! We will be pleased to offer you a corresponding servicing, maintenance or repair! Please contact the company bar GmbH for this.

8. Troubleshooting

⚠ WARNING

Observe the safety instructions

There is danger to life if you do not observe safety instructions.

- When eliminating the faults, always observe the safety instructions from „Chapter 2. Safety“.

NOTE

Spare parts are to be ordered with all information on the type plate and the serial number. It is allowed to mount only original parts of bar GmbH.

9. Repair and spare parts

9.1 Type GD-032 (schematic diagram)

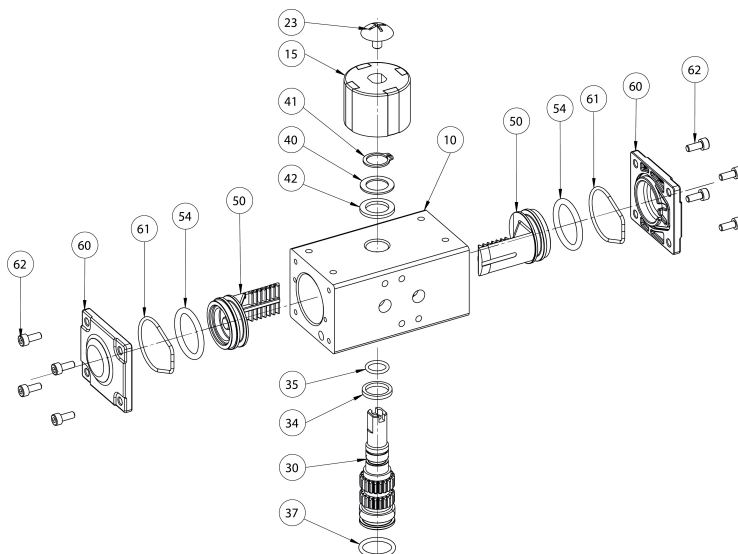


Fig. 9-1 Exploded-view drawing of all individual components of rotary actuator bar-agturn

10	Casing	35	Upper pinion seal	50	Piston
15	Position indicator	37	Lower pinion seal	54	Piston seal
23	Fixing screw to position indicator	40	Supporting ring	60	Cover
30	Pinion	41	Lock washer	61	Cover seal
34	Inner thrust washer	42	Outer thrust washer	62	Cover screws

Spare parts sets:

- Sealing set consists of: 35, 37, 54, 61
- Wear parts set consists of: 34, 42

GD	-	032	/	090	-	Z..	A
Operating way		Type		Swivel angle 90°		Pinion design	Installation variants
S = Single-acting D = Double-acting				Number of springs		V = Octagon with dimensions Z = Two-flats with dimensions	

Tab. 9-1 Order code bar-agturn (example)

9.2 Type GS-075 (schematic diagram)

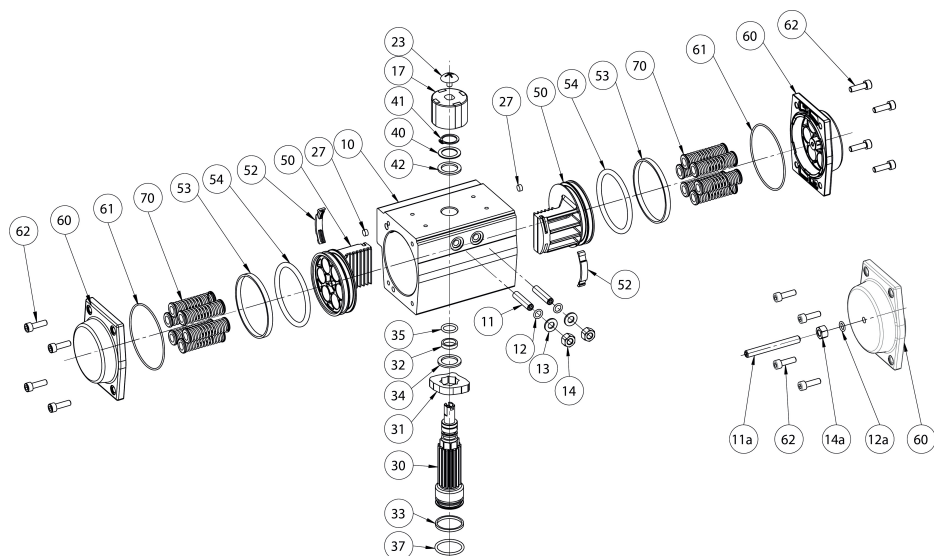


Fig. 9-2 Exploded-view drawing of all individual components of rotary actuator bar-agturn

10	Casing	30	Pinion	50	Piston
11	Stop screw	31	Stop cam	52	Guiding shoe
12	Seal of stop screw	32	Upper pinion bearing	53	Guiding ring
13	Washer	33	Lower pinion bearing	54	Piston seal
14	Lock nut	34	Inner thrust washer	60	Cover
17	Position indicator	35	Upper pinion seal	61	Cover seal
23	Fixing screw to position indicator	37	Lower pinion seal	62	Cover screws
27	Sealing plug channel 4	40	Supporting ring	70	Spring
		41	Lock washer		
		42	Outer thrust washer		

- Sealing set consists of: 12, 27, 35, 37, 54, 61
- Wear parts set consists of: 32, 33, 34, 42, 52, 53

G D	-	0 7 5	/	0 9 0	-	Z...	A
GS	-	0 7 5	/	0 9 0	-	V22	F
Operating way		Type		Swivel angle 90°		Pinion design	Installation variants
S = Single-acting						V = Octagon with dimensions	
D = Double-acting						Z = Two-flats with dimensions	

Tab. 9-2 Order code bar-agturn (example)

9.3 GD-076/180 (schematic diagram)

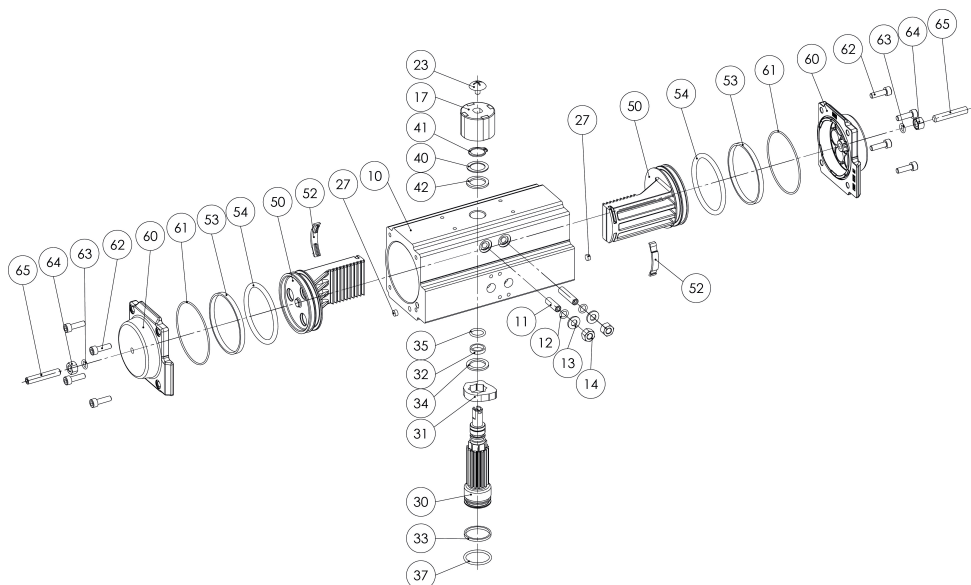


Fig. 9-3 Exploded-view drawing of all individual components of rotary actuator bar-agturn 180°

10 Casing	31 Stop cam	50 Piston
11 Stop screw	32 Upper pinion bearing	52 Guide shoe
12 Stop screw seal	33 Lower pinion bearing	53 Guide ring
13 Washer	34 Inner thrust washer	54 Piston seal
14 Lock nut	35 Upper pinion seal	60 Cover
17 Position indicator	37 Lower pinion seal	61 Cover seal
23 Fixing screw to position indicator	40 Supporting ring	62 Cover screws
27 Sealing plug, channel 4	41 Lock washer	63 Stop screw seal
30 Pinion	42 Outer thrust washer	64 Lock nut
		65 Stop screw

Spare parts sets:

- Sealing set consists of: 12, 27, 35, 37, 54, 61, 63
- Wear parts set consists of: 32, 33, 34, 42, 52, 53

GD	-	076	/	180	-	V17		F
Operating way		Type		Swivel angle 180°		Pinion design		Installation variants
D = Double-acting						V = Octagon with dimensions		

Tab. 9-3 Order code bar-agturn (example)

9.4 Type GD-146/180 (schematic diagram)

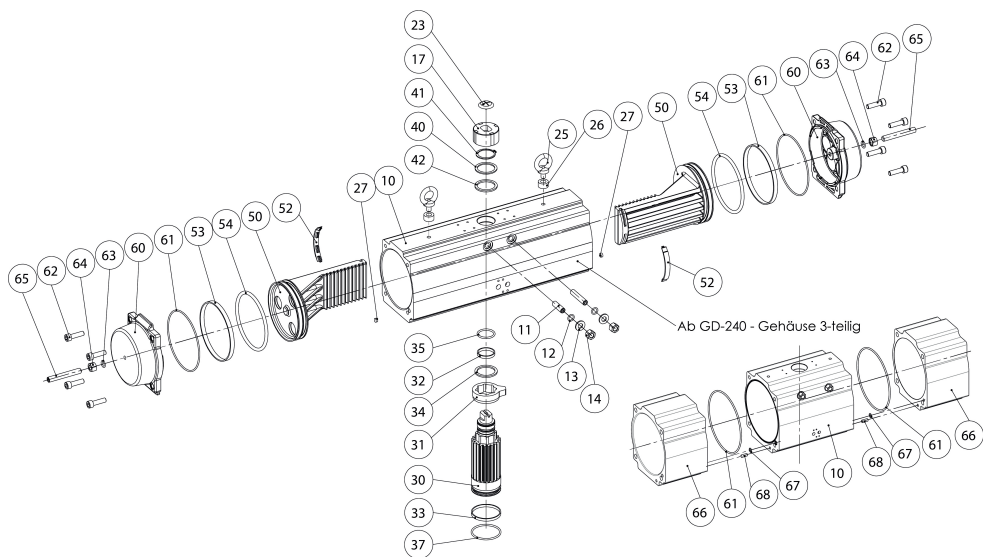


Fig 9-4 Exploded-view drawing of all individual components of rotary actuator bar-agturn 180°

10	Casing	32	Upper pinion bearing	54	Piston seal
11	Stop screw	33	Lower pinion bearing	60	Cover
12	Seal of stop screw	34	Inner thrust washer	61	Cover seal / Housing seal
13	Washer	35	Upper pinion seal	62	Cover screws
14	Lock nut	37	Lower pinion seal	63	Seal Stop screw
17	Position indicator	40	Supporting ring	64	Lock nut
23	Fixing screw to position indicator	41	Lock washer	65	Stop screw
25	Ring nut	42	Outer thrust washer	66	Additional housing
26	Plastic washer	50	Piston	67	Housing seal
27	Sealing plug channel 4	52	Guiding shoe	68	Guide pin
30	Pinion	53	Guiding ring		
31	Stop cam				

- Sealing set consists of: 12, 27, 35, 37, 54, 61, 63
- Wear parts set consists of: 32, 33, 34, 42, 52, 53

G D	-	1 4 6	/	1 8 0	-	V27		F
Operating way		Type		Swivel angle 180°		Pinion design		Installation variants

D = Double-acting

V = Octagon with dimensions

Tab. 9-4 Order code bar-agturn (example)

10. Disassembly

WARNING

Installation works

There is a risk of injury if this product is not properly installed, disassembled and put into operation.

- Make sure the personnel has received the appropriate training.
- Observe the safety instructions in „Chapter 2. Safety“.

10.1 Disassembly of the rotary actuator

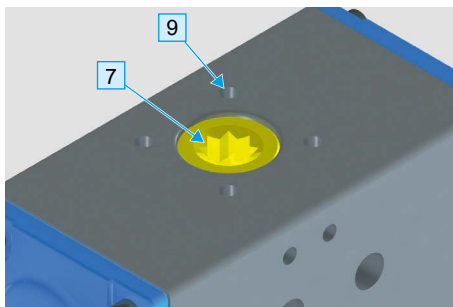


Fig. 10-1 Disassembly of the rotary actuator from the valve
(view on actuator from below = valve interface)

- 7** Installation of the valve spindle / shaft adapter
- 9** Installation of connecting screws

To disassemble the valve, proceed as follows:

- 1.** Loosen the connecting screws (9) between the valve and the rotary actuator.
- 2.** Remove the rotary actuator from the valve spindle.
- 3.** Remove any additional parts such as shaft adapter, reducer, mounting bridge and/or centering and store them carefully.

11. Disposal

- Proper disposal of the products is the responsibility of the customer. Dispose of the products after their use in accordance with the legal requirements regarding safety and environmental protection.
- The materials used in the products are steel, aluminum, brass and various plastics.

Dispose of lubricated parts separately according to local environmental regulations!

If you have any questions, please contact the company bar GmbH.

12. EU Declarations

12.1 Declaration of incorporation according to Directive 2006/42/EC



Z5000009_00A

A WATTS Brand

Auf der Hohl 1 | 53547 Dattenberg | Germany | T: +49 (0)2644 9907-0 | F: +49 (0)2644 9907-35

Original-Einbauerklärung Im Sinne der Maschinenrichtlinie 2006/42/EG Anhang II 1B/ Declaration of Incorporation According to Machinery Directive 2006/42/EC Annex II 1B

Name und Anschrift des Herstellers: **bar pneumatische Steuerungssysteme GmbH**
Name and address of the manufacturer: **Auf der Hohl 1, 53547 Dattenberg / Germany**

Diese Erklärung bezieht sich nur auf das Produkt in dem Zustand, in dem es in den Verkehr gebracht wurde.
Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Rücksprache mit uns umgebaut oder verändert wird.
*This declaration relates exclusively to the product in the state in which it was placed on the market.
The declaration loses validity, if the product is modified without agreement of company bar.*

Hiermit erklären wir, dass das nachstehend beschriebene Produkt
Herewith we declare, that the following product

Produktbezeichnung: **pneumatischer Stellantrieb**
Product denomination: **pneumatic actuator**
Serien-/Typenbezeichnung / model/type: **bar-acturn Typ GD/GS**

eine unvollständige Maschine im Sinne der Maschinenrichtlinie ist und die folgenden grundlegenden Anforderungen der Richtlinie 2006/42/EG erfüllt:

is partly completed machinery in sense of the directive on machinery and meet the following basic requirements of the EC Machinery Directive 2006/42/EC:

Anhang I, Ziffern / Annex I, articles: 1.1.3, 1.1.5, 1.3.2, 1.3.4, 1.3.7, 1.3.9, 1.5.3, 1.5.4, 1.5.5, 1.5.7, 1.5.8, 1.7.3, 1.7.4

bar pneumatische Antriebe sind ausschließlich zum Zusammenbau mit Armaturen bestimmt. Die Inbetriebnahme ist solange untersagt, bis sichergestellt wurde, dass die gesamte Maschine, in die das Produkt eingebaut ist, den Bestimmungen der EG-Richtlinie 2006/42/EG entspricht.

bar actuators are designed to be installed into a pipework. The product must not put in service until the final machinery into which they are to be incorporated has been declared in conformity with the provisions of the Directive 2006/42/EC.

Der Hersteller verpflichtet sich, die Unterlagen zur unvollständigen Maschine der zuständigen nationalen Behörde auf Verlangen elektronisch zu übermitteln. Die zur Maschine gehörenden speziellen technischen Unterlagen nach Anhang VII Teil B wurden erstellt.

With regard of the partly completed machinery, the manufacturer commits to submitting the documents to the competent national authority via electronic transmission upon request. The relevant technical documentation pertaining to the machinery described in Annex VII, part B has been prepared.

Die Einhaltung der in den technischen Daten und Sicherheitshinweisen beschriebenen Betriebsbedingungen ist sicherzustellen. *Take care about the technical data and the relevant warning and safety notices.*

Angewandte harmonisierte Normen / Where appropriate harmonised Standards used:

DIN EN ISO 12100:2010 Sicherheit von Maschinen / Safety of machinery

Bevollmächtigter für die Dokumentation / Authorised person for documentation:

Authorised to compile the technical documentation (must be established within EU):

Bar pneumatische Steuerungssysteme GmbH, Auf der Hohl 1, D-53547 Dattenberg

Dattenberg, 16.01.2019
Ort, Datum
Place, Date

Wild, Thomas, Vertriebsleiter
Name, Vorname und Funktion des Unterzeichners
Surname, first name and function of signatory


Unterschrift
Signature



Deutsche Bank Neustadt Weinstadt • SWIFT DEUTDE33 • IBAN DE35 5487 0095 0022 8114 00
Deutsche Bank Amsterdam • SWIFT DEUTNL2N • IBAN NL52 DEUT 0319 8666 53
HRB 10991 Amtsgericht Montabaur • Ust-Nr. DE 149 522 999
Geschäftsführer: Olivier Givardon, Nigel Wood
bar-info@wattswater.com

bar-gmbh.de

12.2 ATEX Declaration of Conformity



A WATTS Brand

bar 19.0002

Z5000010_00C

Auf der Hohl 1 | 53547 Dattenberg | Germany | T: +49 (0)2644 9607-0 | F: +49 (0)2644 9607-35

ATEX-Konformitätserklärung / ATEX-Declaration of Conformity

Name und Anschrift des Herstellers:
Name and address of the manufacturer:

bar pneumatische Steuerungssysteme GmbH
Auf der Hohl 1, 53547 Dattenberg / Germany

Diese Erklärung bezieht sich nur auf das Produkt in dem Zustand, in dem es in den Verkehr gebracht wurde.
Die Erklärung verliert ihre Gültigkeit, wenn das Produkt ohne Rücksprache mit uns umgebaut oder verändert wird.
This declaration relates exclusively to the product in the state in which it was placed on the market.
The declaration loses validity, if the product is modified without agreement of company bar.

Hiermit erklären wir, dass das nachstehend beschriebene Produkt
Herewith we declare, that the following product

Produktbezeichnung:

pneumatischer Stellantrieb

Product denomination:

pneumatic actuator

Serien-/Typenbezeichnung / model/type:

bar-agturn Typ GD/GS

nach den Anforderungen folgender Richtlinien hergestellt wurde
was manufactured according to the following directives:

2014/34/EU ATEX-Richtlinie / ATEX - Directive (EU-Abl. L 96/309 vom 29.03.2014)

Die Einhaltung der in den technischen Daten und Sicherheitshinweisen beschriebenen Betriebsbedingungen ist sicherzustellen. Der anlagenseitige elektrische Potentialausgleich der Anbauteile ist zu prüfen und über die gesamte Einsatzzeit sicherzustellen.

Please take care about the technical data and the relevant warning and safety notices.
Check the electrical equipotential bonding of all parts and ensure it during whole operating time.

Gerätekennzeichnung / Designation:

II 2 G Ex h IIC T6...T3 Gb
II 2 D Ex h IIIC T180°C Db

Max. Oberflächen-temperatur max. surface temperature	Max. zulässige Umgebungstemperatur max. permissible ambient temperature	Antriebsversion actuator version
T6 (85°C)	-40°C* / -20°C < T _a < +65°C	Tieftemperatur* oder Standard Deep Temperature* or Standard
T5 (100°C)	-40°C* / -20°C < T _a < +80°C	Tieftemperatur* oder Standard Deep Temperature* or Standard
T4 (135°C)	-20 < T _a < +115°C	FKM-Version oder Hochtemperatur FKM-Version or High Temperature
T3 (200°C)	-20°C < T _a < +160°C	Hochtemperatur High Temperature

Angewandte harmonisierte Normen: Where appropriate harmonised Standards used:

DIN EN ISO 80079-36:2016 Explosionsfähige Atmosphären – Explosive atmospheres

Teil 36: Nicht-elektrische Geräte für den Einsatz in explosionsfähigen Atmosphären – Grundlagen und Anforderungen

Part 36: Non-electrical equipment for explosive atmospheres – Basic method and requirements

DIN EN ISO 80079-37:2016 Explosionsfähige Atmosphären – Explosive atmospheres

Teil 37: Nicht-elektrische Geräte für den Einsatz in explosionsfähigen Atmosphären – Schutz durch konstruktive Sicherheit

„c“ [...]

Part 37: Non-electrical equipment for explosive atmospheres – Non-electrical type of protection constructional safety "c"

Dattenberg, 19.03.2020

Ort, Datum
Place, Date

Wood, Nigel, Managing Director

Name, Vorname und Funktion des Unterzeichners
Surname, first name and function of signatory

Unterschrift
Signature



Deutsche Bank Neustadt Weinstraße • SWIFT DEUTDE33 • IBAN DE35 5467 0095 0022 8114 00
Deutsche Bank Amsterdam • SWIFT DEUTNL2N • IBAN NL52 DEUT 0319 8666 53
HRB 10991 Amtsgericht Montabaur • Ust-Nr. DE 149 522 999
Geschäftsführer: Olivier Giverdon, Nigel Wood
bar-info@wattswater.com

bar-gmbh.de

13. Annex / Technical data

Technical data

	Standard design	Upon request
Construction type	Pneumatic twin-piston rotary actuator Type GD = double-acting Type GS = single-acting (with spring return)	
Design features	Rack-and-pinion principle with self-centering piston guide in the housing; single-acting: with safety springs	
Mounting position	any	
Standards	Connection point actuator/signal device: acc. to: VDI/VDE 3845 (NAMUR) Connection point actuator/control valve: acc. to NAMUR or VDI/VDE 3845 Connection point actuator/valve: four or eight internal threads in the actuator housing acc. to EN ISO 5211	Different mounting and connection dimensions are possible Actuator pinion optionally with two-flats bore according to EN ISO 5211 or according to customer requirements
Materials	Housing: Al-alloy, hard anodised Cover: Al-alloy, powder-coated Piston/rack: Al-alloy Pinion: corrosion-protected steel Seals: NBR Bearings: made of plastic with very good sliding properties Screws: Stainless steel A2	Housing coating: powder-coated; PTFE Cover coating: PTFE Pinion: Stainless steel AISI 303; AISI 316 Seals: FKM
Ambient temperature	-20 °C to +80 °C	Low temperature design: -40 °C to +80 °C High temperature design: -20 °C to +160 °C
Nominal swivel angle	double- and single-acting: 90° Nominal swivel angle can be adjusted as standard from + 5° to -5° in both end positions	Another swivel angles upon request
Torque	2 Nm to 13.040 Nm	
Control pressure	2 to 8 bar	
Control medium/quality	Filtered compressed air. ISO 8573-1:2010 [7:-:4], dew point min. 10°C below lowest operating temperature	Upon request also can be operated with other non-aggressive, gaseous or liquid media

Tab. 13-1 Technical data

Dimensional drawings for bar-agturn type GD-032

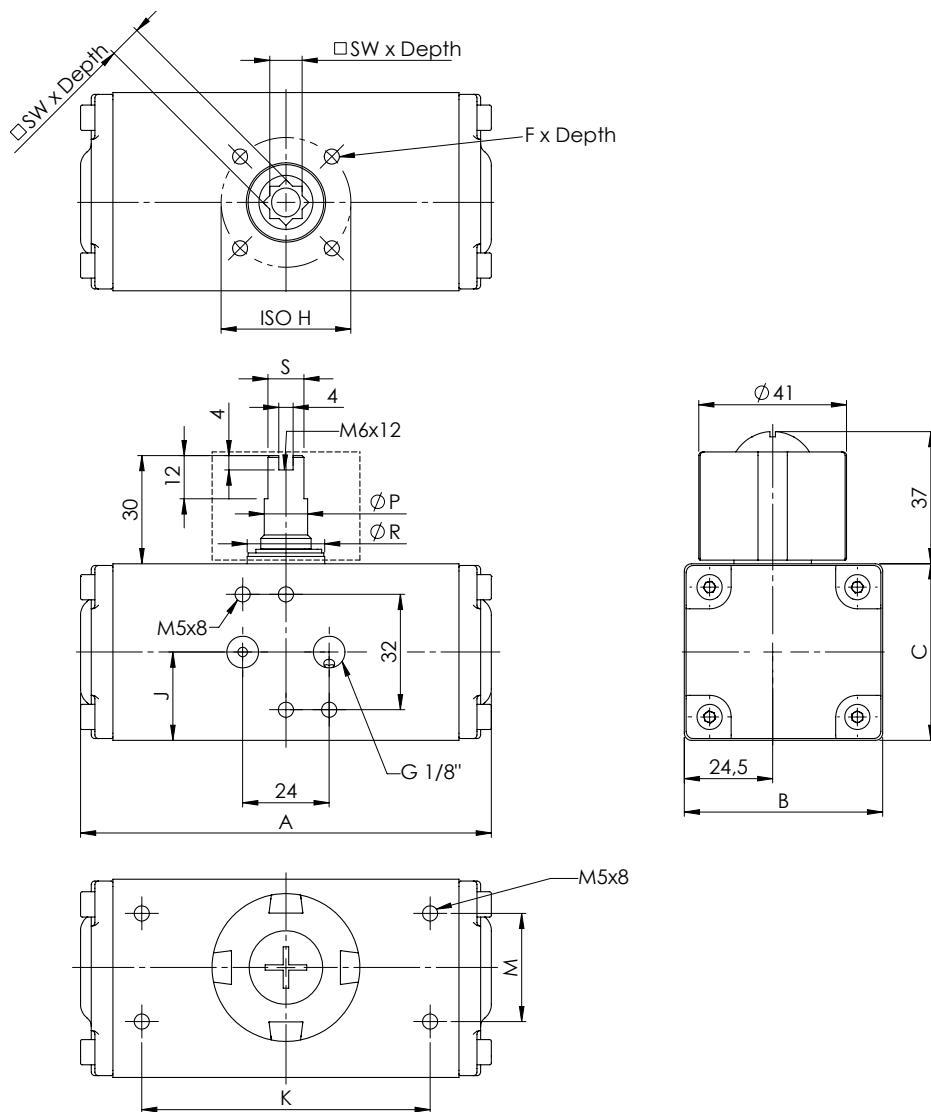


Fig. 13-1 Dimensional drawing bar-agturn type GD-032

Dimensional drawings for bar-agturn type GD-040 and GD/GS-052 to 160

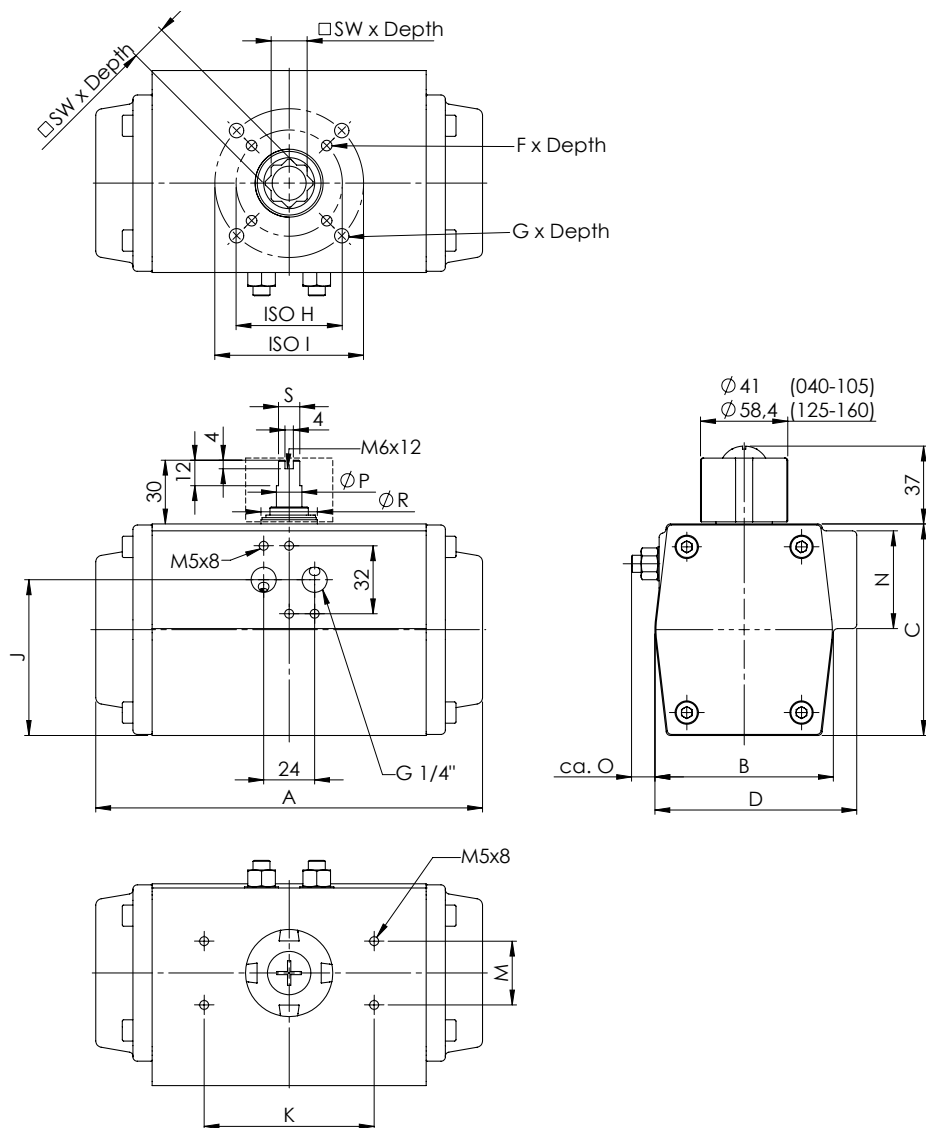


Fig. 13-2 Dimensional drawing bar-agturn type GD-040 and GD/GS-052 to 160

Dimensional drawings for bar-agturn type GD/GS-196 till 270

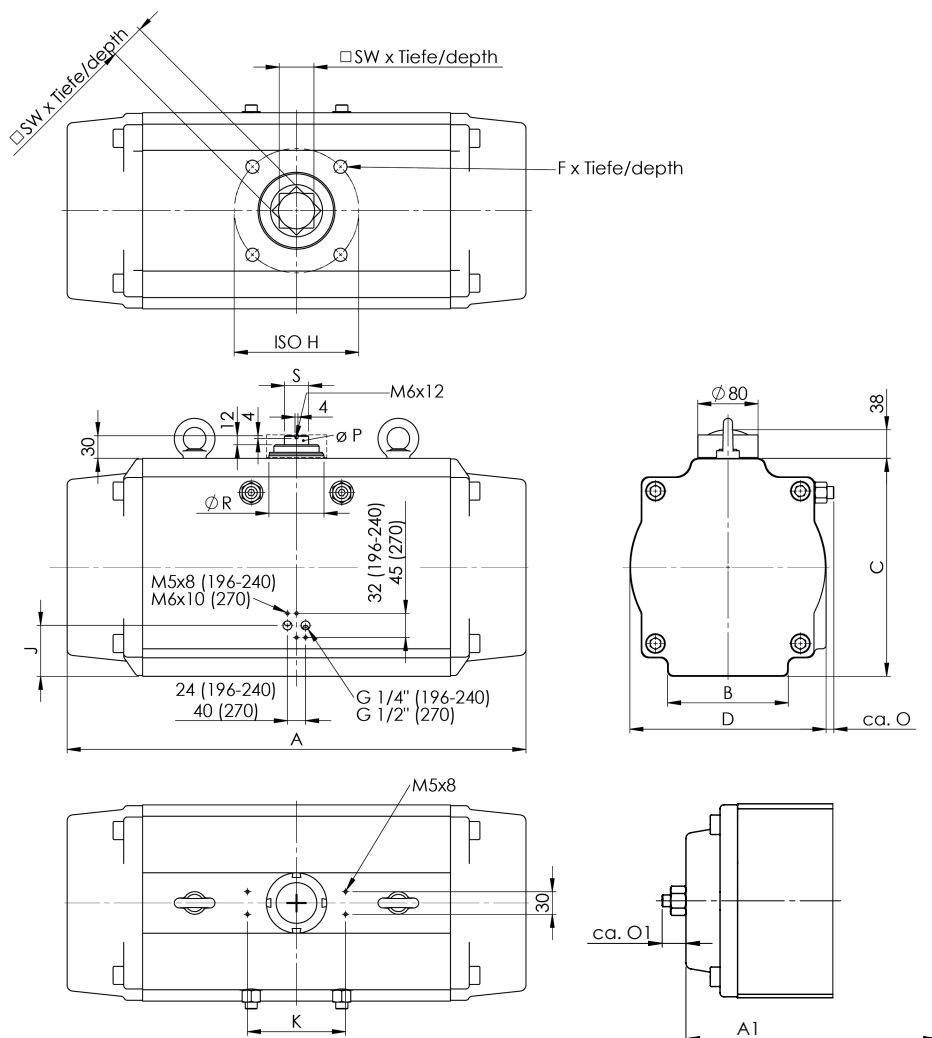


Fig. 13-3 Dimensional drawings for bar-agturn type GD/GS-196 till 270

Dimensional drawings for bar-acturn type GD/GS-300 till 400

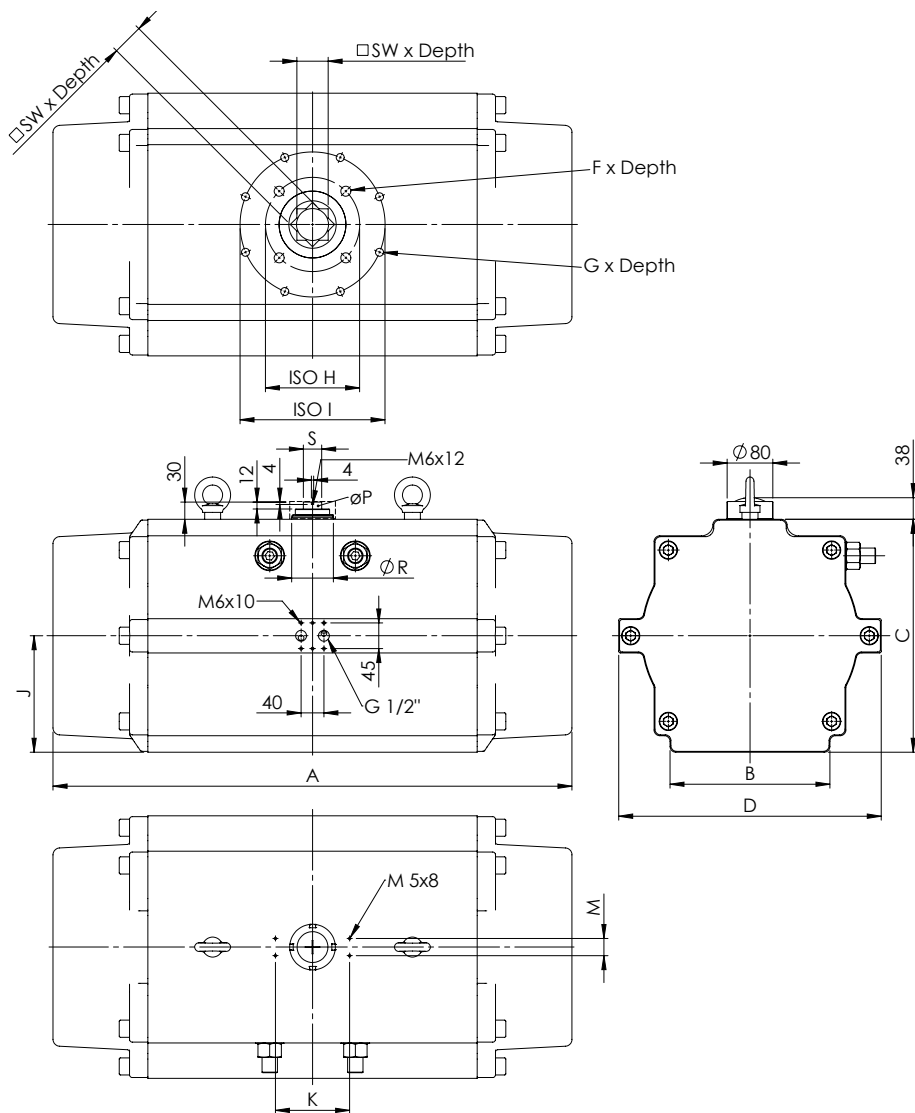


Fig. 13-4 Dimensional drawings for bar-acturn type GD/GS-300 till 400

Dimension table for bar-acturn 90° actuators

Type GD GS	A	B	C	D	E	F x Depth	G x Depth	ISO H	ISO I
032	114	55	49		1/8"	M5x8		ø36/F03	
040	120	60,5	60		1/4"	M5x8	M6x9	ø36/F03	ø50/F05
052	147	60	72	74,5	1/4"	M5x8	M6x9	ø36/F03	ø50/F05
063	165	72	88	83	1/4"	M6x10	M8x13	ø50/F05	ø70/F07
075	182	84	99,5	95	1/4"	M6x10	M8x13	ø50/F05	ø70/F07
083	208	92	109	103	1/4"	M6x10	M8x13	ø50/F05	ø70/F07
092	262	102	116,5	109,5	1/4"	M6x10	M8x13	ø50/F05	ø70/F07
105	270	115	133	124,5	1/4"	M8x13	M10x16	ø70/F07	ø102/F10
125	301	135	155	142	1/4"	M8x13	M10x16	ø70/F07	ø102/F10
140	395	152	172		1/4"	M10x16	M12x19	ø102/F10	ø125/F12
160	454	174	197		1/4"	M10x16	M12x19	ø102/F10	ø125/F12
196	528	130	230	206	1/4"	M16x24		ø140/F14	
216	536	130	255	226	1/4"	M16x24		ø140/F14	
240	608	160	289	260	1/4"	M20x25		ø165/F16	
270	721	160	328	294	1/2"	M20x25		ø165/F16	
300	769	210	348	406	1/2"	M20x25		ø165/F16	
350	909	280	408	460	1/2"	M20x25	M16x25	ø165/F16	ø254/F25
400	925	300	480	516	1/2"	M20x25	M16x25	ø165/F16	ø254/F25

Type GD GS	J	K	N	O	P	R	S	SW x Depth
032	24,5	80			ø12	ø21,5	10	9x11
040	24	80		15	ø12	ø21,5	10	11x14
052	48	80	46	9	ø12	ø21,5	10	11x14
063	61	80	46	12	ø12	ø26,5	10	14x18
075	73,3	80	46	11	ø12	ø26,5	10	17x19
083	80	80	46	12	ø12	ø26,5	10	17x21
092	91	80	46	9	ø18	ø35	14	17x21
105	99,5	80	46	7,5	ø18	ø35	14	22x26
125	127	80	46	8,5	ø28	ø46	20	22x26
140	138	(*)	75	7	ø28	ø51	20	27x31
160	159,5	(*)	84	6	ø28	ø51	20	27x31
196	51	130		8,5	ø44	ø61	32	36x40
216	58,5	130		10,5	ø44	ø73	32	36x40
240	67,5	130		10,5	ø44	ø73	32	46x50
270	79	130		13,5	ø44	ø73	32	46x50
300	174	130			ø44	ø73	32	46x60
350	204	130			ø44	ø73	32	55x60
400	240	130			ø44	ø73	32	55x60

* For actuator sizes 140 and 160, the dimension K is 80 and 130 mm.

Tab. 13-2 Table of dimensions for bar-acturn type GD/GS-032 to 400

Weight and volume for 90° actuators

Type GD	Weight [kg]	Volume/double stroke [L]
032	0,73	0,09
040	0,9	0,19
052	1,3	0,28
063	2,0	0,44
075	2,55	0,64
083	3,25	0,9
092	5,24	1,37
105	6,06	1,83
125	10,00	3,0
140	14,02	4,7
160	24,52	6,9
196	33,2	11,3
216	39,7	15,0
240	57,0	20,0
270	78,7	31,0
300	121,7	53,5
350	210,2	81,4
400	280	108,6

Type GS	Weight [kg]*	Volume/double stroke [L]
032	/	/
040	/	/
052	1,43	0,12
063	2,17	0,21
075	2,81	0,30
083	3,67	0,43
092	6,01	0,64
105	6,9	0,95
125	11,38	1,6
140	16,42	2,5
160	28,32	3,7
196	40,2	5,9
216	49,2	7,5
240	70,0	11,0
270	100,3	17,0
300	149,12	23,8
350	259,3	35,1
400	325	52,6

Tab. 13-3 Weight and volume of the actuators

* Weight with maximum number of spring

Dimensional drawings for bar-agturn Type GD-056/180 to -126/180

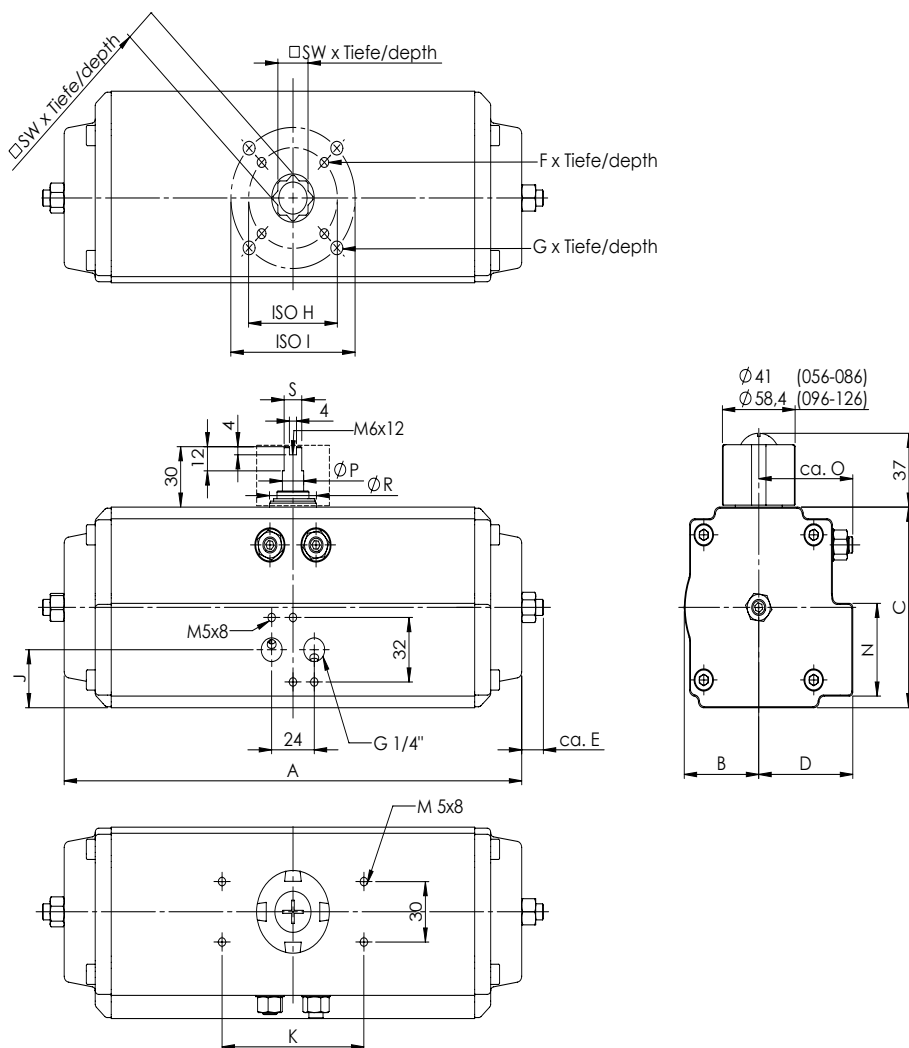


Fig. 13-5 Dimensional drawings for bar-agturn type GD-056 to -126

Dimensional drawings for bar-agturn Type GD-146/180 to -270/180

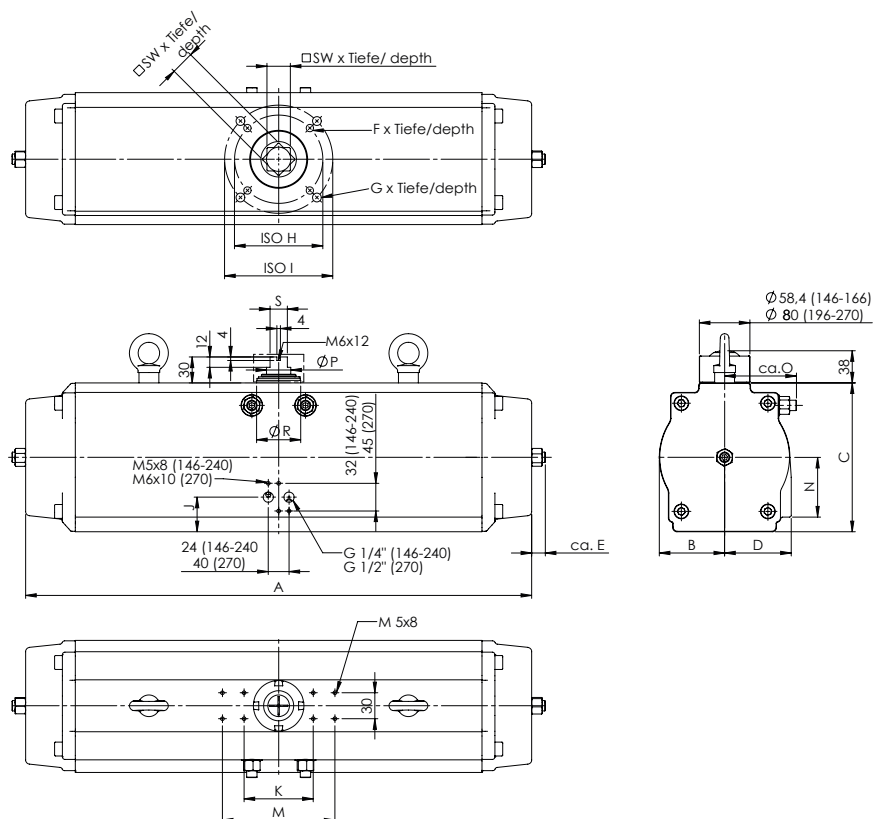


Fig. 13-6 Dimensional drawings for bar-agturn type GD-146 to -270

Dimensional drawings for bar-agturn Type GD-300 to -400

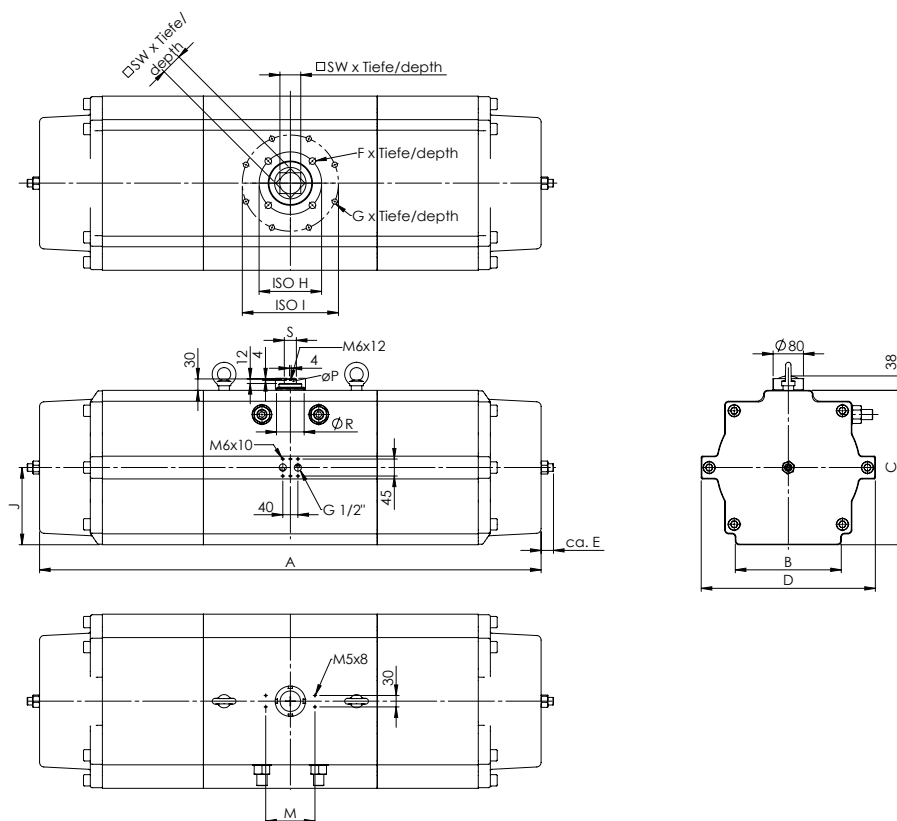


Fig. 13-7 Dimensional drawings for bar-agturn type GD-300 to -400

Dimension table bar agturn 180° actuators

Type GD	A	B	C	D	E	F x Depth	G x Depth	ISO H	ISO I
056	210	30	72	41,5	14	M5x8	M6x9	ø36/F03	ø50/F05
066	241	36	88	47	13	M6x10	M8x13	ø50/F05	ø70/F07
076	258	42	99,5	53	12	M6x10	M8x13	ø50/F05	ø70/F07
086	302	46	109	57	15	M6x10	M8x13	ø50/F05	ø70/F07
096	375	50	116,5	58,5	19	M6x10	M8x13	ø50/F05	ø70/F07
106	397	57,5	133	67	17	M8x13	M10x16	ø70/F07	ø102/F10
126	440	67,5	155	74,5	21	M8x13	M10x16	ø70/F07	ø102/F10
146	585	75,5	172	77	16	M10x16	M12x19	ø102/F10	ø125/F12
166	675	87	197	87	15	M10x16	M12x19	ø102/F10	ø125/F12
196	781	103	230	103	33	M16x24		ø140/F14	
216	789	113	255	113	29	M16x24		ø140/F14	
240	892	130	289	130	31	M20x25		ø165/F16	
270	1061	147	328	147	29	M20x25		ø165/F16	
300	1147	210	348	406	33	M20x25		ø165/F16	
350	1325	280	408	460	33	M20x25	M16x25	ø165/F16	ø 254/F25
400	1378	300	480	516	49	M20x25	M16x25	ø165/F16	ø 254/F25

Type GD	J	K	M	N	O	P	R	S	SW x Depth
056	24	80		46	39	Ø12	Ø21,5	10	11x14
066	27	80		46	43	Ø12	Ø26,5	10	14x18
076	28,8	80		46	51	Ø12	Ø26,5	10	17x21
086	29	80		46	53	Ø12	Ø26,5	10	17x21
096	28,8	80		46	60	Ø18	Ø35	14	17x21
106	33,5	80		46	65	Ø18	Ø35	14	22x26
126	38,5	80		46	71	Ø28	Ø46	20	22x26
146	40	80	130	69	83	Ø28	Ø51	20	27x31
166	44,5	80	130	77	93	Ø28	Ø51	20	27x31
196	51		130	91	112	Ø44	Ø61	32	36x40
216	58,5		130	98	124	Ø44	Ø73	32	36x40
240	67,5		130	108	140	Ø44	Ø73	32	46x50
270	79		130	116	160	Ø44	Ø73	32	46x50
300	174		130			Ø44	Ø73	32	46x60
350	204		130			Ø44	Ø73	32	55x60
400	240		130			Ø44	Ø73	32	55x60

Tab. 13-4 Dimension table for bar-agturn type GD-056/180 to 400/180

Weight and volume bar-agturn 180° actuators

Type GD	Weight [kg]	Volume/double stroke [L]
056/180	1,9	0,47
066/180	2,9	0,79
076/180	3,7	1,13
086/180	4,9	1,6
096/180	6,6	2,45
106/180	9	3,48
126/180	13	5,65
146/180	21	9,16
166/180	31	13,69
196/180	46	22,33
216/180	54	28,53
240/180	77,2	39,2
270/180	115	60,1
300/180	159,8	93,5
350/180	238	141,2
400/180	343,7	193,9

Tab. 13-5 Weight and volume at 180 degrees



The bar products are comprehensively tested. The company bar therefore only guarantees the replacement or - at its sole discretion - the free repair of those components of the delivered products which, in the opinion of bar, have demonstrable manufacturing defects. Warranty claims due to defects or defects of title can be asserted within one (1) year from delivery/transfer of risk. Excluded from the warranty are damages due to normal product use or friction as well as damages due to changes or unauthorized repairs to the products for which bar rejects any claim for damages (direct or indirect). (Please refer to our website for detailed information.) All deliveries are subject to the General Conditions of Sale which can be found at www.bar-gmbh.de.

The descriptions and images contained in this product data sheet are for informational purposes only and are not guaranteed. bar GmbH reserves the right to make technical and constructive changes to its products without prior notice.

Warranty: All purchases and sales contracts expressly require the Purchaser to accept the General Terms and Conditions of Sale and Delivery which can be found on www.bar-gmbh.de/agb. bar GmbH hereby objects to any deviating or additional condition to the General Terms and Conditions of Sale and Delivery which has been communicated to the Purchaser in any form without the written consent of a representative of bar GmbH.



bar pneumatische Steuerungssysteme GmbH

Auf der Hohl 1 • 53547 Dattenberg • Germany
Tel. +49 (0)2644 96070 • Fax +49 (0)2644 960735
bar-info@wattswater.com • www.bar-gmbh.de